



HPR-360

Heading & Position Reference Owner's Manual

Watson Industries, Inc.
3035 Melby Street
Eau Claire, WI 54703

P: 715 839 0628
F: 715 839 8248
E: support@watson-gyro.com

TABLE OF CONTENTS

Introduction.....	3
Product Description	3
Installation	3
Orientation:	3
Mounting:.....	3
GPS Antenna Mounting	3
Figure 1 Antenna Spacing.....	4
Environment:	4
Power:.....	4
Operation	4
Initialization	4
Normal Operation	5
Interface	5
RS-232 Output Format.....	5
RS-232 Input Commands.....	6
Specifications.....	8
Connections	9
Dimensions	10
Figure 2 - HPR-360 Dimensions.....	10
Figure 3 - GPS Antenna Dimensions	10
WARNING	11
Customer Service.....	12
Appendix A.....	13
Appendix B.....	15
Activating Command Mode (Double Spacebar Mode).....	15
Accessing the Main Menu.....	15
Determining Output Channels	15
Setting Output Channels	15
Setting Antenna Spacing.....	16
Setting Baud Rate	16
Appendix C.....	18

Watson Industries prides itself on solving customer problems and serving their needs in a timely fashion. This manual is intended to facilitate this goal and to provide written information about your product. We ask that you carefully read this manual. Becoming familiar with the manual will help you understand the product's capabilities and limitations, as well as provide you with a basic understanding of its operation. If, after reading the manual, you require further assistance, do not hesitate to call Watson Industries with your questions and comments.

CAUTION!

Watson Sensors are rugged devices that have been used successfully in a number of harsh environments. The components have been qualified to withstand a mechanical shock of 200g's or greater, and most enclosures provide an added level of protection. However, dropping a sensor from waist height onto a hard floor can cause a shock level of 600g's. At this level, damage is likely to occur.

Introduction

The Heading & Position Reference provides heading & GPS coordinates information. This sensor is equipped with a dual GPS antenna system that provides heading data even when the vehicle is not in motion. This unit will output several data items including GPS true north heading, GPS latitude, GPS longitude and GPS UTC time. The unit will also output GPS magnetic variation (which is the angle from magnetic north to true north – positive in clockwise easterly direction).

Product Description

Watson Industries HPR-360/ has an internal GPS module and two external GPS antennas. This allows the HPR to output GPS True North heading along with GPS Latitude & Longitude based on the position of the aft antenna.

Installation

Orientation:

The base plate of the unit is to be mounted on top of a horizontal surface with the connector toward the forward direction of the vehicle. The HPR drawing, with wire call outs, is located in Table 2. The “Fore” antenna must be placed ahead of the “Aft” Antenna on a line parallel to the axis of forward motion. The appropriate distance between the antennas is defined by the antenna spacing (see Figure 1).

Mounting:

The unit has four 0.15” diameter mounting holes for using 6-32 screws. A mounting plate is provided for a flat surface mount. The unit may be adhesively mounted at any of its surfaces. If high shock loads are expected (greater than 20G or repeated shocks greater than 10G), the appropriate shock mounting should be used to prevent damage. Vibration isolation should be used for use in 4G or greater vibration environments.

GPS Antenna Mounting

The GPS antennas have magnetic mounts two M 2.6 mounting holes (See Figure 6) and need an unobstructed view of the sky to receive signals from GPS satellites. Both antennas need a minimum 6” x 6” ground plane. Nothing between or around the antennas can be higher than these ground planes.

Antenna spacing is directly related to the GPS heading accuracy. The antennas must be placed within 1 cm of the spacing selected to maintain accuracy. The “Fore” antenna is placed ahead of the “Aft” Antenna on a line parallel to the axis of the vehicle. This sensor allows antenna spacing (in millimeters) from 0.3m up to 5m (See Appendix B). The larger the spacing, the more accurate the GPS heading output will be. Unfortunately, with larger spacing values there is also an increased risk of signal reflections between GPS antennas that can degrade accuracy.

Adjustable antenna spacing is implemented for HPR-360 sensors.

GPS Antenna Spacing (meters)	GPS Heading: Accuracy: Static
0.5m *	0.5° rms
1.0m	0.25° rms
2.0m	0.13° rms
5.0m	0.07° rms

* Factory Default setting (as shipped)

Figure 1 Antenna Spacing

Caution: The GPS heading accuracy is directly related to the accuracy of the antenna placement and HPR alignment. Antenna placement must be within 1 cm of the chosen spacing for accuracy.

Environment:

Avoid mounting sites that are subject to significant temperature variation over the duration of the test. For all applications, it is preferable to install the device where linear dynamic effects are minimized.

Power:

This unit has an internal regulator to allow operation over a wide voltage input range. Best operation is obtained at either 12 or 24 VDC level, although operation is fully satisfactory down to 10 VDC and up to 35 VDC. Power consumption of the unit is about 5 Watts. Internal capacitors are provided to remove a reasonable level of power line noise, however, capacitors should be added for long power line wiring or if noise is induced from other loads on the circuit. The HPR power system is isolated from the HPR signal system.

Note: The signal ground is connected to case.

The SMA GPS antenna connectors are on the front of the case. This type of connector should be torqued to a maximum of 5 in-lbs. The GPS Antennas are supplied with +5 VDC, less than 40mA each. The minimum gain requirement for these antennas is 20 dB. For more information on the connectors and pinout of the HPR-360 see Table 2.

Operation

Initialization

During this time, a message is sent from the unit via the RS-232 serial link. This message gives information about the HPR such as the full model number, serial number, and firmware revision. The message can be read by using a terminal program or by using the terminal mode of Watson Industries' communication software.

The HPR can also be "re-initialized" after it has been turned on. There are several ways to re-initialize the HPR. For more information, see the Interface section of this manual.

Normal Operation

During normal operation, the HPR will output highly accurate data for the user to interpret. This data is transmitted in several different ways. The most common way to acquire data from the HPR is to use the RS-232 serial output. There are two RS-232 output formats: decimal and binary. The exact formatting structure is discussed later in the Interface section of this manual. The HPR generates many different data items for output including: GPS True Heading, Magnetic Variation, Ground Track Heading, and Latitude and Longitude. Any combination of these data items can be selected for transmission via the RS-232 serial link. More information on the available channels and their formatting is included in the appendices.

Interface

RS-232 Output Format

The standard RS-232 output consists of a string of decimal ASCII characters sent asynchronously at regular intervals. By default, the string is sent at 9600 baud with eight data bits, one stop bit and no parity. The mating connector for the RS-232 is a 9 Pin Male D-Sub. The RS-232 signal is referenced to signal ground. The number of strings sent per second depends on the baud rate and the output format. The maximum rate is 284.44 strings per second. See Appendix B for information on how to change the data string. The contents of a typical string (are formed as follows:

(See Appendix B for information on how to change the data string.)

1. A single letter and a space used to indicate the start of the data string. The letter “I” indicates the start of an inertial data string. The letter “R” indicates the start of a Reference data string.
1. A nine character string representing the GPS Universal Time (UTC) starting with six digits, a decimal point, one digit and a space for up to 235959.9 Hours minutes seconds tenth seconds (HHMMSS.S).
Note: The field is filled with asterisks when the data is invalid. (“*****.”)
2. A six character string representing the GPS True North Heading angle with three digits, a decimal point, one digit and a space for zero to 359.9 degrees.
Note: The field is filled with asterisks when the data is invalid. (“***.”)
3. A seven character string representing the GPS Magnetic Variation starting with a “+” or a “-“, followed by three digits, a decimal point, one digit and a space for up to ± 179.9 degrees.
Note: The field is filled with asterisks when the data is invalid. (“+***.”)
4. A ten character string representing the GPS Latitude starting with a “+” or a “-“, followed by two digits, a decimal point, five digits and a space for up to ± 89.99999 degrees.
Note: The field is filled with asterisks when the data is invalid. (“+**.*”)
5. A eleven character string representing the GPS Longitude starting with a “+” or a “-“, followed by three digits, a decimal point, five digits and a space for up to ± 179.99999 degrees.
Note: The field is filled with asterisks when the data is invalid. (“+***.*”)

- The string is terminated by a carriage return. There will then be a short interval with no data transmission before the next string begins.

Example:

I	161409.9	269.4	-001.1	+44.86405	-091.46836	<CR>
	↑	↑	↑	↑	↑	↑
	UTC	True North Heading	Magnetic Variation	Latitude	Longitude	
(1)	(2)	(3)	(4)	(5)	(6)	(7)
space	space	space	space	space	space	space

The string transmission rate can be improved by reducing the amount of information (data items) transmitted. The data items transmitted can be changed by using special commands to modify the EEPROM of the unit (see Appendix B). More channels are available for output – see Appendix A.

The system is protected from inadvertent write-over of the EEPROM by requiring two spacebar commands during the initialization interval to access the EEPROM or related functions.

The baud rate may be changed from the nominal value of 9600 baud by modifying the default value in the EEPROM of the unit to 38.4K, 19.2K, or 4800 baud.

A text header that is sent by the HPR during initialization identifies the unit by part number and by serial number and gives the date of last calibration. Additionally, a line of text characters that identifies the data channel columns is sent if the serial output is set to ASCII decimal. This whole message can be temporarily (or as a default) suppressed or restored by a “*” command from the interfacing computer.

Data transmission sent by the HPR can also be suppressed or restored by a “+” command from the interfacing computer.

The other output format available is a binary format. The binary format provides generally the same information as the decimal ASCII format, but in a compact binary format. In this format, there are nominally 23 words sent that represent 7 fourteen bit and 2 twenty-eight bit output channels followed by a carriage return. Again, this may be reduced to improve the update rate by using special commands to modify the EEPROM of the unit. This format is for highly experienced users only. See Appendix C for further details.

RS-232 Input Commands

The RS-232 input commands are provided for the purpose of unit test and installation set-up. Use the same parameters that are used for the RS-232 output (9600 baud ASCII nominal, or as reset in the units EEPROM).

Note: Many commands require command or “Double spacebar mode” in order to access them. For more information on how to activate Command Mode, see the instructions in Appendix B.

These commands are available to the user (others are used at the factory for alignment and calibration):

- An “R” or “r” will set the outputs to their Reference Command modes replacing the Inertial mode. This mode is used for factory calibration or diagnostics. Command mode is required for access to this command.

2. An “I” or “i” sets the unit to Inertial. This is the default mode at power up and is the normal operating mode. Command mode is required for access to this command.
3. An “!” will reinitialize the unit. As a precaution, access to initialization is inhibited. A spacebar command must be sent within about 2 seconds of the “!” command for initialization to occur. This command does not require command mode to be in effect.
4. An “_” command will change the output format to decimal ASCII. This change is made non-volatile in the unit on EEPROM by keying in the quote (“) character. Command mode is required for access to this command.
5. A “^” command will change the output format to binary. This change is made non-volatile in the unit on EEPROM by keying in the quote (“) character. Command mode is required for access to this command.
6. A “:” command will toggle the output to send a frame of data upon receiving any non-command character (On to Off; Off to On). This change is made non-volatile in the unit on EEPROM by keying in the quote (“) character. Command mode is required for access to this command.

Note: To test if this command is active when the unit is not flowing data, send a carriage return (or any other non-command character to the sensor, and observe if there is any output.

7. A “+” command will suppress or restore the transmission of data. This command will toggle the data transmission (On to Off; Off to On). Command mode is required for access to this command.

Note: It is possible for both the “:” and the “+” commands to be active at the same time. The “+” command determines whether the sensor is allowed to transmit data. So in this case, the “:” command must also be turned off to allow the free flow of data.

8. The “&” command calls a menu which allows any of several parameters to be set. From this menu, the user can change data channels for serial output, GPS antenna spacing, and baud rate. Command mode is required for access to this command.

These and other changes are made nonvolatile in the unit on EEPROM by keying in the quote (“) character.

The commands “~”, “@”, “#”, “\$”, “(”, “)”, “{”, “}”, “[”, “<”, “>” and “?” are used by the Watson factory to calibrate the unit and should be used only with the assistance of the factory. If an undesired function is called, a “Q”, and sometimes Escape or a Delete will interrupt the command and return to operation with the least disturbance to the system. All other unspecified characters such as carriage return, line feed and space are ignored by the system.

Specifications

Heading

Range:	0° - 360°	
Resolution:	0.02°	Binary mode (14 bit)
Accuracy: Static	0.5° rms	Using GPS (0.5 m antenna spacing)

GPS Positioning

Range: Latitude	±90°	
Range: Longitude	±180°	
Resolution:	0.0000013°	Binary mode (28 bit)
Accuracy:	±0.6m (with DGPS)	±2.5m (without DGPS)

Environmental

Temperature: Operating	-30°C to +70°C	
Temperature: Storage	-40°C to +85°C	
Vibration: Operating	5g rms	20 Hz to 2 KHz
Vibration: Survival	10g rms	20 Hz to 2 KHz
Shock: Survival	500g	10mS ½ sine wave

Electrical

Frame Rate:	284.44 Hz	Maximum
Startup Time: Data	5 sec	
† Startup Time: Satellite Acquisition	5 min	Typical
Input Power:	10 to 35VDC	4.8W
Input Current:	400mA @ 12VDC	200mA @ 24VDC
Digital Output:	RS-232	

Physical

Size: Including Mounting Flanges	3.24"W x 5.78"L x 3.50"H	8.2 x 14.7 x 8.9 (cm)
Weight:	21.9 oz (1.4lb)	620 grams (0.6Kg)
Connection: RS-232	9 pin female "D" subminiature	
Connection: Power / Analog Output	9 pin male "D" subminiature	
Connection: Antenna	SMA (2)	Antenna cable length: 3.0m

† Acquisition time for GPS units is typical for the contiguous United States. Acquisition time may differ due to interference in your geographic area.

- Specifications are subject to change without notice.
- This product may be subject to export restrictions. Please consult the factory.

Connections

9 –Pin Male Power Connector

Pin	Description
1	Power Ground
2	+ 12 or + 24 VDC
3	Factory use (Do not connect)
4 - 7	No Connection
8	No Connection
9	Signal Ground

9 –Pin Female RS-232 Connector

Pin	Description
1	No Connection
2	TXD*
3	RXD
4	Shorted to pin 6
5	Signal Ground
6	Shorted to pin 4
7	Shorted to pin 8
8	Shorted to pin 7
9	+5V Power**

*User Receives data on this line

** Power for optional wireless (Bluetooth) adapter

Table 2. Pin Out

Dimensions

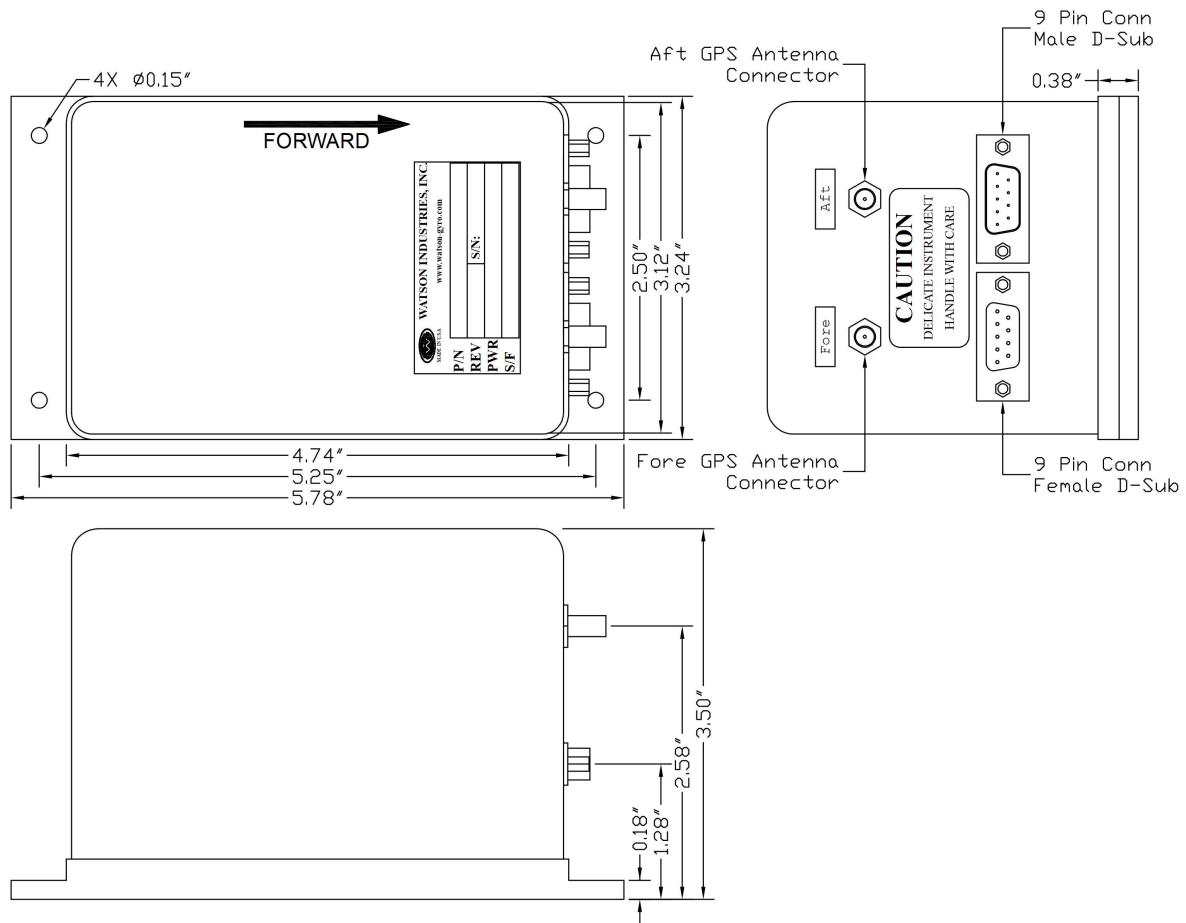


Figure 2 - HPR-360 Dimensions

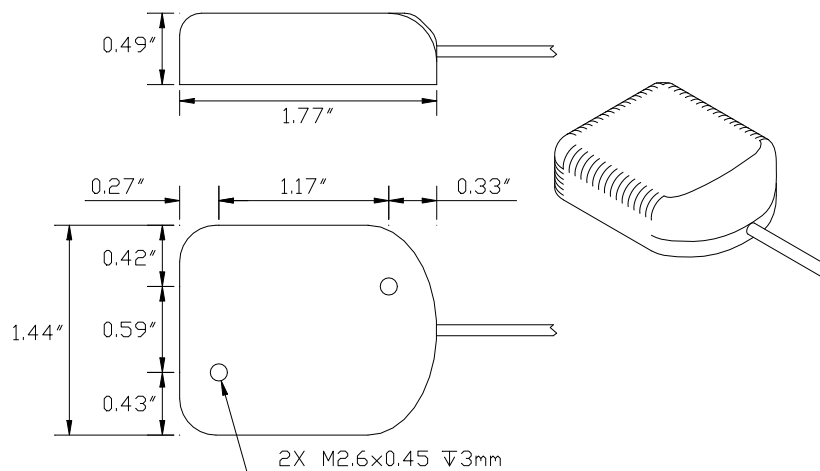


Figure 3 - GPS Antenna Dimensions

WARNING

Rough handling or dropping of this unit is likely to cause damage.

Over-voltage and/or miswiring of this unit will cause damage.

This unit should be protected against prolonged exposure to high humidity and/or salt air environments.

DISCLAIMER

The information contained in this manual is believed to be accurate and reliable; however, it is the user's responsibility to test and to determine whether a Watson Industries' product is suitable for a particular use.

Suggestion of uses should not be taken as inducements to infringe upon any patents.

WARRANTY

Watson Industries, Inc. warrants, to the original purchaser, this product to be free from defective material or workmanship for a period of two full years from the date of purchase. Watson Industries' liability under this warranty is limited to repairing or replacing, at Watson Industries' sole discretion, the defective product when returned to the factory, shipping charges prepaid, within two full years from the date of purchase. The warranty described in this paragraph shall be in lieu of any other warranty, express or implied, including but not limited to any implied warranty of merchantability or fitness for a particular purpose.

Excluded from any warranty given by Watson Industries are products that have been subject to abuse, misuse, damage or accident; that have been connected, installed or adjusted contrary to the instructions furnished by seller; or that have been repaired by persons not authorized by Watson Industries.

Watson Industries reserves the right to discontinue models, to change specifications, price or design of this product at any time without notice and without incurring any obligation whatsoever.

The purchaser agrees to assume all liabilities for any damages and/or bodily injury that may result from the use, or misuse, of this product by the purchaser, his employees or agents. The purchaser further agrees that seller shall not be liable in any way for consequential damages resulting from the use of this product.

No agent or representative of Watson Industries is authorized to assume, and Watson Industries will not be bound by any other obligation or representation made in connection with the sale and/or purchase of this product.

PRODUCT LIFE

The maximum expected life of this product is 20 years from the date of purchase. Watson Industries, Inc. recommends the replacement of any product that has exceeded the product life expectation.

Customer Service

All repairs, calibrations and upgrades are performed at the factory. Before returning any product, please contact Watson Industries to obtain a Returned Material Authorization number (RMA).

Return Address & Contact Information

Watson Industries, Inc.
3035 Melby Street
Eau Claire, WI 54703
ATTN: Service Department
Telephone: (715) 839-0628 Fax: (715) 839-8248 email: support@watson-gyro.com

Returning the Product

Product shall be packaged making sure there is adequate packing around all sides. Correspondence shall include:

- Customer's Name and Address
- Contact Information
- Equipment Model Number
- Equipment Serial Number
- Description of Fault

It is the customer's responsibility to pay all shipping charges from customer to Watson Industries, including import and transportation charges.

Appendix A

The following outputs are available via the RS-232 serial link. Their full-scale ranges are listed for both decimal and binary format.

<u>Inertial Output</u>	<u>Label</u>	<u>Full Scale Decimal</u>	<u>Full Scale Binary</u>
Time	TM	UTC ¹ HHMMSS.S	Seconds Since Reset 16,383 seconds
GPS True North Heading ²	TH	0.0 to 359.9°	0 to 360°
GPS Magnetic Variation ³	MV	±179.9°	±180°
GPS Ground Track Heading ⁴	GH	0.0 to 359.9°	0 to 360°
GPS Ground Track Velocity ⁵	VG	±399.9 Km/hr	±400 Km/hr
GPS Latitude ⁶	LT	±89.99999	±90° (4 bytes)
GPS Longitude ⁶	LN	±179.99999	±180° (4 bytes)
Temperature	TP	-40° to 88°C	-40° to 88°C (7 bit)
Status Bits	ST	3 ASCII chars representing Octal digits	1 byte
Flag Bits	FL	3 ASCII chars representing Octal digits	1 byte

Note: Certain channels use GPS data, which at times may be invalid. The behavior may also differ depending on whether the sensor is transmitting data in ASCII decimal or binary mode. The table below shows how each channel behaves in the event of invalid GPS data.

Channel	Output Format	
	ASCII Decimal	Binary
¹ GPS universal time (UTC)	Filled with asterisks “*****.”	Normal operation (Seconds since reset)
² GPS True North Heading	Filled with asterisks “***.”	Binary data (Zero)
³ GPS Magnetic Variation	Filled with asterisks “+***.”	Binary data (Zero)
⁴ GPS Ground Track Heading	Filled with asterisks “***.”	Binary data (Zero)
⁵ GPS Ground Track Velocity	Filled with asterisks “+***.”	Binary data (Zero)
⁶ GPS Latitude & Longitude	Filled with asterisks “+**.****+***.****”	Binary data (Zero) for each data item

The Status Bits contain the following information:

Bit	Description (If Set)
0	Not Set
1	Not Set
2	Heading Error Flag
3	System Error Flag
4	Velocity Over Range Flag
5	Reference Command selected
6	Checksum Error Flag

Example: The status channel output in ASCII Decimal is “154”

Octal Digit	1	5			4		
Binary Equivalent	1	1	0	1	1	0	0
Status Bit #	6	5	4	3	2	1	0

Bit 6	Set	Checksum Error
Bit 5	Set	Unit is in Reference Mode
Bit 4	Reset	Velocity is in Range
Bit 3	Set	System Error
Bit 2	Set	Heading Error
Bit 1	Reset	
Bit 0	Reset	

The Flag Bits contains the following information:

Bit	Description (If Set)
0	Latitude & Longitude Data Loss
1	GPS Ground Track Velocity data loss
2	GPS Ground Track Heading data loss
3	Not Set
4	GPS True North Heading data loss
5	GPS Universal time (UTC) data loss
6	Logic Input Switches disabled

Example: The flag channel output in ASCII Decimal is “123”

Octal Digit	1	2			3		
Binary Equivalent	1	0	1	0	0	1	1
Status Bit #	6	5	4	3	2	1	0

```

bit 6 is set   - Logic Input disabled
bit 5 is reset - valid GPS UTC data
bit 4 is set   - invalid GPS True North Heading data
bit 3 is reset - 
bit 2 is reset - valid GPS Ground Track Heading data
bit 1 is set   - invalid GPS Ground Track Velocity data
bit 0 is set   - invalid GPS Latitude & Longitude data

```

Appendix B

Activating Command Mode (Double Spacebar Mode)

- 1) Connect the unit to a DC power source that is off.
- 2) The viewing computer needs a valid bi-directional RS-232 serial port. Connect the serial port of the Watson sensor to the computer's serial port.
- 3) Open a terminal program (such as HyperTerminal) to interface with the unit. The default baud rate of the unit is 9600 baud. Make sure the computer's serial port is open.
- 4) Power-on the unit. A startup message will be transmitted by the unit and will appear in the terminal window unless it has been suppressed (See RS-232 Input Commands above).
- 5) During initialization, hit the space bar twice within close succession.

Note: The sensor initialization time begins after the startup message is transmitted. Typically, this time period lasts 5 seconds, but could be as long as 127 seconds depending on your sensor.

- 6) Wait until after initialization is finished. At this point, command mode will be activated and the unit will accept keyboard commands.

Note: Most Watson sensors have initialization times that are shorter than 30 seconds. Any extra keystrokes (other than two spacebars) sent during initialization will deactivate command mode.

**It can often take a few attempts to get the hang of step 5. Repeat steps 4-6 until successful.

Accessing the Main Menu

- 1) Activate Command Mode (See above)
- 2) Typing '&' will bring up the main menu:

TYPE IN THE NUMBER OF YOUR SELECTION (OR 'Q' TO QUIT):

- 1 = SET OUTPUT CHANNELS
- 2 = LIST CURRENT OUTPUT CHANNEL SELECTION
- 3 = SET GPS ANTENNA SPACING
- 4 = SET NEW BAUD RATE

Determining Output Channels

- 1) Activate Command Mode (See above).
- 2) Type '&' (this will bring up the main menu again).
- 3) Typing in '2' will show which channels are currently active

Setting Output Channels

- 1) Activate Command Mode (See above).
- 2) Type '&' (this will bring up the main menu again).
- 3) To change which channels are output, type '1' at the main menu.
This will bring up the following message:

TO SET FOR OUTPUT FOR ANY OF THE FOLLOWING DATA ITEMS, PRESS Y
TO AVOID ANY OF THE FOLLOWING DATA ITEMS, PRESS N
TO QUIT AND DISREGARD ANY OTHER DATA, PRESS Q

*** DO YOU WANT TO PROCEED? (Y/N/Q)

- 4) To proceed type 'Y'. Stop this process by typing either 'N' or 'Q'.
If 'Y' is pressed, each channel will come up one at a time.
For example:

DO YOU WANT OUTPUT OF TIME?

- 5) Type 'Y' to output the channel, type 'N' to remove the channel.
After the last data channel is listed, this message will appear:

Y = GOBACK, N = INSTALL DATA & QUIT, Q = QUIT
DO YOU WANT TO TRY TO SET DATA AGAIN?

- 6) To accept the new channels type 'N'. Typing a 'Y' will start the command menu sequence over.
Typing a 'Q' at any time in the sequence will quit without updating the channels.
Changes made will not change the non-volatile settings. To make these new settings the default value, send a Quotation Mark (").
7) Press the space bar after quitting or updating the new channels to restart the data flow.

Setting Antenna Spacing

- 1) Activate Command Mode (See above).
- 2) Type '&' (this will bring up the main menu again).
- 3) To set a new antenna spacing, type '3'.

This will bring up the menu:

CURRENT SPACING IS: 0.500
ENTER ANTENNA SPACING IN METERS (0.300 to 5.000), Q TO QUIT

- 4) Enter the Antenna Spacing with up to three decimal places.

Note: Input values outside the limit range are rejected (with 'ENTRY EXCEEDS LIMITS - TRY AGAIN' message) and the unit returns to the previous menu.

Setting Baud Rate

- 1) Activate Command Mode (See above).
- 2) Type '&' (this will bring up the main menu again).
- 3) To change the baud rate at which the sensor communicates, type '4'.

This will bring up the menu:

TYPE IN THE NUMBER OF YOUR SELECTION (OR 'Q' TO QUIT):
(EFFECTIVE NEXT POWER-UP)

1 = 38.4 K BAUD

2 = 19.2 K BAUD

3 = 9.6 K BAUD

4 = 4.8 K BAUD

4) Change the baud rate to a new setting.

To change to 38,400 Baud, type '1'.

To change to 19,200 Baud, type '2'.

To change to 9,600 Baud, type '3'.

To change to 4,800 Baud, type '4'.

The baud rate change will take effect immediately. To make the new baud rate the default setting, send a quote symbol (") using the new baud rate. Otherwise the old baud rate will return the next time the unit is powered up.

Note: The baud rate of the software that is communicating to the sensor will need to be changed to match the new setting.

5) Press the space bar to resume data transmission.

The factory settings for serial communications are 9.6K baud with 8 bits and one stop bit, no parity.

Appendix C

Binary Data Format

Example 1: The Unit is seeing these conditions:

Time Since Reset	True North Heading	Magnetic Variation
15 seconds	315.0°	-001.1°


Binary output Format:

Word1	Word2	Word3	<CR> byte
0x808F	0xEFFF	0xFFCD	0x0D

Word 1 is the 2 byte Time Since Reset

Word 2 is the 2 byte True North Heading

Word 3 is the 2 byte Magnetic Variation

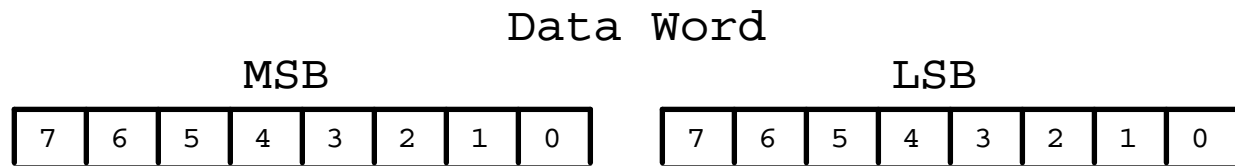

Bit 7 of the MSB is set to 1. Bits 6 to 0 of the MSB are the upper 7 bits of the data. (sign plus 6 bits of data)

Bit 7 of the LSB is set to 1. Bits 6 to 0 of the LSB are the lower 7 bits of the data.

As the data words are received, the LSB is shifted left to shift out the 7th bit (always set to 1). The MSB is then connected to the LSB as a 16 bit word. This word is then shifted left to shift out the 7th bit (always set to 1). What remains is a signed fractional word with a resolution of 13 bits plus a sign bit.

To convert binary data:

Time Since Reset	True North Heading	Magnetic Variation
0x808F	0xEFFF	0xFFCD

Need split each word into two bytes:

Time Since Reset	True North Heading	Magnetic Variation
0x80	0xEF	0xFF
0x8F	0xFF	0xCD

Remove the most significant bit from each byte:

Time Since Reset	True North Heading	Magnetic Variation
0x00	0x6F	0x7F
0x0F	0x7F	0x4D

Shift lower byte left once (to remove 1 bit space between bytes):

Time Since Reset	True North Heading	Magnetic Variation
0x00	0x6F	0x7F
0x1E	0xFE	0x9A

Shift lower & upper bytes left once (to remove 1 bit space a top of high byte):

Time Since Reset	True North Heading	Magnetic Variation
0x00	0xDF	0xFF
0x3C	0xFC	0x34

Convert from hexadecimal to decimal counts:

Time Since Reset	True North Heading	Magnetic Variation
60	57340	65332

Correct Magnetic Variation for the sign

If >32767 then subtract 65536 from the data

Time Since Reset	True North Heading	Magnetic Variation
60	57340	-204

Convert to units: counts x scale factor

For Time Since reset: Scale factor is 16384/65526 counts

For Heading: Scale factor is: $360^\circ / 65536$ counts

Magnetic Variation: Scale factor is: $180^\circ / 32768$ counts

Time Since Reset	True North Heading	Magnetic Variation
15	314.98°	-1.12°

Example 2: The Unit is seeing these conditions:

Latitude	Longitude
44.86403°	-91.46668°
equivalent to	equivalent to
4451.84233 N	09126.00199 W


Binary output Format:

Word1	Word2	Word3	Word4	<CR> byte
0x8FF9	0xE7F7	0xDFBD	0x9FF9	0x0D

Word 1 & 2 form the 4 byte Latitude

Word 3 & 4 form the 4 byte Longitude

 Data Word



For four byte (2 words – 1 long word) data:

Bit 7 of the High Byte is set to 1. Bits 6 to 0 of the High Byte are the upper 7 bits of the data. (sign plus 6 bits of data). Bit 7 of the 2nd Byte is set to 1. Bits 6 to 0 of the 2nd Byte are the next 7 bits of the data. Bit 7 of the 3rd Byte is set to 1. Bits 6 to 0 of the 3rd Byte are the next 7 bits of the data. Bit 7 of the LSB is set to 1. Bits 6 to 0 of the LSB are the lower 7 bits of the data.

As the data words are received, the LSB is shifted left to shift out the 7th bit (always set to 1). The 3rd byte is then connected to the LSB as the lower 16 bit word. This word is then shifted left to shift out the 7th bit (always set to 1). The 2nd byte is connected to the lower word. These 3 bytes are then shifted left to shift out the 7th bit (always set to 1). The MSB is then connected to the 3 lower bytes as a 32 bit long word. This long word is then shifted left to shift out the 7th bit (always set to 1). What remains is a signed fractional long word (32 bits) with a resolution of 27 bits plus a sign bit.

To convert binary data:

Latitude		Longitude	
0x8FF9	0xE7F7	0xDFBD	0x9FF9

Split each word into two bytes:

Latitude		Longitude	
0x8F	0xE7	0xDF	0x9F
0xF9	0xF7	0xBD	0xF9

Remove the most significant bit from each byte:

Latitude		Longitude	
0x0F	0x67	0x5F	0x1F
0x79	0x77	0x3D	0x79

Shift lower byte left once (to remove 1 bit space between bytes):

Latitude	Longitude
0x0F	0x5F
0x79	0x3D
0x67	0x1F
0xEE	0xF2

Shift Latitude & Longitude lower two bytes once (to remove 1 bit space in second byte):

Latitude	Longitude
0x0F	0x5F
0x79	0x3D
0xCF	0x3F
0xDC	0xE4

Shift Latitude & Longitude lower three bytes once (to remove 1 bit space in third byte):

Latitude	Longitude
0x0F	0x5F
0xF3	0x7A
0x9F	0x7F
0xB8	0xC8

Shift all bytes for each parameter left once (to remove 1 bit space a top of high byte):

Latitude	Longitude
0x1F	0xBE
0xE7	0xF4
0x3F	0xFF
0x70	0x90

Latitude	Longitude
0x1FE73F70	0xBEF4FF90

Convert from hexadecimal to decimal counts:

Latitude	Longitude
535248752	3203727248

Correct data items for the sign:

Latitude & Longitude:

If $> 2147483647 [(2^{31})-1]$ then subtract $4294967296 (2^{32})$ from the data

Latitude	Longitude
535248752	-1091240048

Multiply the data (in counts) by the scale factor

Convert to units: counts * scale factor

For Latitude: Scale factor is: $180^\circ / 2^{31}$ or 2147483648 counts = $535248752 \text{ counts} * (180^\circ / 2^{31} \text{ counts}) = 44.86403^\circ$

For Longitude: Scale factor is: $180^\circ / 2^{31}$ or 2147483648 counts = $-1091240048 \text{ counts} * (180^\circ / 2^{31} \text{ counts}) = -91.46668^\circ$

Latitude	Longitude
44.86403°	-91.46668°