

# **DYNAMIC MEASUREMENT SYSTEM**

## **OWNER'S MANUAL**

**PART NUMBER: DMS-EGP01**  
**GPS Module & Antenna**



**WATSON INDUSTRIES, INC.**  
**3035 MELBY STREET**  
**EAU CLAIRE, WI 54703**

Phone: (715) 839-0628

FAX: (715) 839-8248

email: [support@watson-gyro.com](mailto:support@watson-gyro.com)

# Table of Contents

1. Introduction .....	3
2. Product Description .....	3
3. Installation .....	4
Orientation.....	4
Mounting .....	4
Environment .....	4
Power / Connectors.....	4
Calibration.....	4
4. Operation .....	4
Initialization.....	4
Normal Operation.....	5
Special Operation Modes .....	5
Reference Mode.....	5
Free Mode.....	6
Hold Mode.....	6
Control Mode.....	6
Interface.....	6
RS-232 Output Format .....	6
RS-232 Input Commands .....	8
Analog Outputs.....	9
Analog Inputs .....	10
Speed Inputs .....	10
Output Logic Commands.....	10
Input Logic Commands .....	10
5. Specifications .....	11
6. Connections / Dimensions.....	12
Figure 2 Antenna Dimensions .....	13
7. Warning .....	14
8. Customer Service .....	15
9. Appendix A .....	16
Activating Command mode or Double Spacebar Access to commands.....	18
Determining and Setting Output Channels .....	18
Setting Output Format .....	19
Setting Heading Mode .....	19
Setting Velocity Mode:.....	20
Setting Altitude Correction:.....	21
10. Appendix B.....	22
11. Appendix C.....	24

Watson Industries prides itself on solving customer problems and serving their needs in a timely fashion. This manual is intended to facilitate this goal and to provide written information about your product. We ask that you carefully read this manual. Becoming familiar with the manual will help you understand the product's capabilities and limitations, as well as provide you with a basic understanding of its operation. If, after reading the manual, you require further assistance, do not hesitate to call Watson Industries with your questions and comments.

# CAUTION!

Watson Sensors are rugged devices that have been used successfully in a number of harsh environments. The components have been qualified to withstand a mechanical shock of 200g 's or greater, and most enclosures provide an added level of protection. However, dropping a sensor from waist height onto a hard floor can cause a shock level of 600g's. At this level, damage is likely to occur.

## Introduction

The Dynamic Measurement System (DMS) is a solid-state sensor that provides the user with dynamic measurements of angular attitude and angular rate, together with linear acceleration, in three (3) mutually perpendicular planes (see Figure 2). A unique feature is the two sets of acceleration measurements. One set gives sensor acceleration with respect to the sensor mounting face while the other set resolves the motion into horizontal and vertical components, irrespective of the sensor attitude. This allows the earth's gravitational field to be isolated from the measurement of sensor motion.

## Product Description

Watson Industries DMS uses solid-state gyros and silicon accelerometers. Interface to the microprocessor is done through a 16-bit A/D converter. The solid state vibrating structure angular rate gyros used in this system provide extremely high reliability, low power consumption, shock resistance and low cost. There are no physical adjustments required by the user. All of the primary transducers are locked into position during manufacture. Adjustments are made with the aid of PC-based maintenance software, which communicates with the DMS via the RS-232 serial connection. Calibration is achieved by using the maintenance software to store data in non-volatile memory within the DMS. The DMS-EGP01 differs from a "standard" DMS with the addition of a GPS antenna and receiver. The GPS receiver also provides a vehicle velocity that is used to improve accuracy in high dynamic environments. This is most useful with wheeled vehicles. This unit outputs Latitude & Longitude based on the position of the antenna.

This unit will operate in two heading modes. In the first mode, the DMS uses the GPS module. In this mode, the unit outputs track heading, does not take in commands and the vehicle speed is digital. Please note that the Baud Rate needs to be set to 9600 when using the GPS module (any selectable baud rate is acceptable when the GPS module is not in use). The heading needs to be in the GPS Track mode and velocity input needs to be in the GPS Ground Track mode. (See Appendix A Setting Velocity & Heading Modes)

In the second mode, the unit does not use the GPS module, it outputs relative heading, has the ability to take in commands (double space bar mode) and the vehicle speed is an analog input. The heading needs to be in the relative mode & velocity input needs to be in the Analog input mode. (See Appendix A Setting Velocity & Heading Modes).

A vehicle speed input is used to assist in the correction of errors. It is also included in the parameter set that is available for serial output. Although its use is not always required, it is highly recommended that this signal be supplied to the DMS. The unit requires an analog/digital signal. The analog signal is scaled to 40 KPH per volt. The digital signal is from the GPS module. Forward motion should produce a positive signal with respect to signal ground. Many other velocity scale factors can be handled through simple changes in the scale factor stored in the EEPROM in the microprocessor. This can be done with a PC and the assistance of the factory.

## **Installation**

### ***Orientation***

The connector face of the unit must point in the forward direction. The DMS drawing, with wire call outs, is located in Figure 1. The DMS is a rugged device and will withstand harsh environments. However, due attention needs to be paid to the nature of the sensor and its prime function, which is to measure attitude and motion.

### ***Mounting***

The DMS-EGP01 has four 0.20" diameter mounting holes for 10-24 screws (See Figure 1). If high shock loads are expected (greater than 20G or repeated shocks greater than 10G), appropriate shock mounting should be used to prevent damage. Vibration isolation should be used if operation in 4G or greater vibration environments is expected.

The GPS antenna has a magnetic mount with two M2.6 mounting holes and needs an unobstructed view of the sky to receive signals from GPS satellites. The antenna needs to be mounted on a minimum 6" x 6" ground plane. Nothing nearby the antenna can be higher than this ground plane.

### ***Environment***

Avoid mounting sites that are subject to significant temperature changes over the duration of the test. Temperature variation will induce noticeable rate sensor bias drift, which will result in degraded attitude accuracy.

### ***Power / Connectors***

This unit has an internal regulator to allow operation over a wide voltage input range. Best operation is obtained at either 12 or 24 VDC, although operation is fully satisfactory down to 10 VDC and up to 30 VDC. Power draw of the unit is about 5.5 Watts. Internal capacitors are provided to remove a reasonable level of power line noise, however, capacitors should be added for long power line wiring or if noise is induced from other loads on the circuit. The DMS power system is isolated from the DMS signal system. The mating connector for the Power/Analog Output Connector is a 25 Pin female D-Sub.

Note: The signal ground is connected to case.

The SMA GPS antenna connector is on the side of the case. This type of connector should be torqued to a maximum of 5 in-lbs. The GPS Antennas are supplied with +5 VDC, less than 40mA each. The minimum gain requirement for these antennas is 20 dB. For more information on the connectors and pinout of the DMS-EGP01, see Figure 1.

### ***Calibration***

The DMS is calibrated at the factory before it is shipped to the user. It is recommended that the unit be returned to the factory annually for evaluation and recalibration.

## **Operation**

### ***Initialization***

Ideally, the DMS should be stationary and level when it is turned on. If not, the sensor readings may not be accurate for after initialization. The time required for the initialization process is not

the same for every type of DMS, but typically takes 4 to 5 seconds. During this time, a message is sent from the unit via the RS-232 serial link. This message gives information about the DMS such as the full model number, serial number, and software revision. The message can be read by using a terminal program or by using the terminal mode of Watson Industries' communication software.

The DMS can also be "re-initialized" after it has been turned on. This is especially useful if the sensor has been used in severe maneuvers that have over-ranged the angular rate sensors and caused significant errors to accumulate. Sometimes re-initializing the unit will allow for a faster recovery than waiting for the error correction routines to correct the sensor readings. There are several ways to re-initialize the DMS. For more information, see the Interface section of this manual.

## ***Normal Operation***

During normal operation, the DMS will output highly accurate inertial data for the user to interpret. This data is transmitted in several different ways. The most common way to acquire data from the DMS is to use the RS-232 serial output. There are two RS-232 output formats: decimal and binary. The exact formatting structure is discussed later in the Interface section of this manual. The DMS generates twelve different data items for output: X, Y, and Z rates, X, Y, and Z accelerations, Bank, Elevation, and Heading, and Forward, Lateral, and Vertical Accelerations. Any combination of these data items can be selected for transmission via the RS-232 serial link. The DMS also has analog outputs (see Interface section) that can be used to send data to the user.

In normal operation, the DMS takes data from its internal rate sensors and integrates in a closed loop system, with the accelerometers as a long-term reference, to generate Bank, Elevation and Heading data. In most cases, these algorithms provide for very stable and accurate output signals; however, the user should be aware that exceeding the normal ranges of the sensors would affect accuracy. For example, while custom DMS units may have differing ranges, the gyros in a typical DMS have a maximum rate of 100°/s. Care should be taken not to exceed this rate because the closed loop system will receive inaccurate data. This will result in errors in the angle output signals.

While this DMS is "all attitude", the accuracy deteriorates rapidly when its forward direction is within about 5 degrees of vertical. Operation for any extended period of time in this orientation is not recommended. If these few operational precautions are observed, the DMS should provide very accurate data for a wide variety of applications.

## ***Special Operation Modes***

### ***Reference Mode***

This mode is usually used for calibration or diagnostics. When in reference mode, the DMS will output data generated directly from the sensor reference signals rather than as a product of the closed loop integration used for normal operation. This mode provides sensor information similar to normal operation mode with the following differences:

- Bank and Elevation are obtained directly from the accelerometers - no gyro stabilization.
- No heading information is available.
- Angular Rate Sensors are not close-loop bias corrected.

The reference mode can be selected either through the terminal mode, or by an analog logic command. Note that reference mode is never a default setting. It must be re-selected when re-powering the unit.

### ***Free Mode***

While in Free Mode, the DMS will output data from the sensors without correction by the references. For example, the Bank Angle data output in Free Mode is calculated directly from the X axis Rate Sensor. In this case, the angle is a direct integration of the roll rate. Free Mode can be used to totally reject effects from dynamic accelerations, but accuracy degrades with time. It is intended for use over periods of a few minutes at a time. This mode provides sensor information similar to normal operation mode with the following differences:

- Bank and Elevation are obtained directly from the rate gyros.
- No heading information is available.
- Angular Rate Sensors are not close-loop bias corrected.

Free mode can be accessed either through terminal mode, or by an analog logic command. Note that free mode is never a default setting. It must be re-selected when re-powering the unit. The user should not enter free mode until after the DMS is initialized and its readings are stable.

### ***Hold Mode***

This mode inhibits bias adjustments to the gyros. It is intended for short-term use only since leaving biases uncorrected will allow errors to accumulate over time. The accumulating bias error will result in small attitude errors. Hold mode can provide better performance in highly dynamic environments such as continuous circling over several minutes time. The user should not enter hold mode until after the DMS is initialized and its readings are stable.

### ***Control Mode***

In this mode, the DMS will output sensor data normally unless it receives a control mode command. Once a command is received, the DMS will send data in response and await the next command. Using this mode, the user can retrieve the EEPROM map, baud rates, output formats, and many other operational settings of this sensor. Having access to this information makes the Control Mode useful in assisting the factory to remotely troubleshoot the certain operational problems that can occur. For more details, see the RS-232 Input Commands section later in this manual.

## ***Interface***

The DMS has analog, logic, and digital interface capabilities.


### ***RS-232 Output Format***

The standard RS-232 output consists of a string of decimal ASCII characters sent asynchronously at regular intervals. Nominally, the string is sent at 9600 baud with eight data bits, one stop bit and no parity. The mating connector for the RS-232 is a 9 Pin Male D-Sub. The number of strings sent per second depends on the baud rate and the output format. The maximum rate is 71.11 strings per second. See Appendix A for information on how to change the data string. The contents of a typical string are formed as follows:

1. A single letter and a space used to indicate the start of the data string. The letter “G” indicates the start of an inertial data string with successful GPS data input. The letter “I” indicates the start of an inertial data string with GPS disabled or absence of valid GPS data. The letter “R” indicates the start of a Reference data string. If the letter is in lower case (“g”, “i”, or “r”), an error over-range condition is indicated (see below).
2. A seven character string representing the bank angle starting with a “+” or a “-“, followed by three digits, a decimal point, one digit and a space for up to  $\pm 179.9$  degrees.

3. A six character string representing the elevation angle starting with a “+” or a “-“, followed by two digits, a decimal point, one digit and a space for up to ±89.9 degrees.
4. A six character string representing the heading angle by three digits, a decimal point, one digit and a space for zero to 359.9 degrees.
5. A six character string representing the X axis angular rate starting with a “+” or a “-“, followed by two digits, a decimal point, one digit and a space for up to ±99.9 degrees/second.
6. A six character string representing the Y axis angular rate starting with a “+” or a “-“, followed by two digits, a decimal point, one digit and a space for up to ±99.9 degrees/second.
7. A six character string representing the Z axis angular rate starting with a “+” or a “-“, followed by two digits, a decimal point, one digit and a space for up to ±99.9 degrees/second.
8. A seven character string representing the Forward Velocity starting with a “+” or a “-“, followed by three digits, a decimal point, one digit and a space for up to ±399.9 Km/Hr.
9. The string is terminated by a carriage return. There will then be a short interval with no data transmission before the next string begins.

Example:

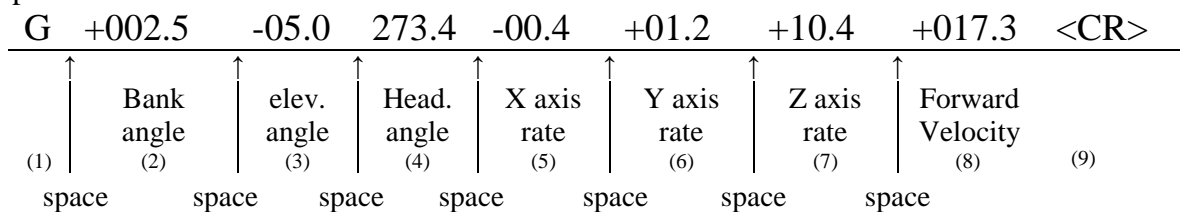

The string transmission rate can be improved by reducing the amount of information (data items) transmitted. The data items transmitted can be changed by using special commands to modify the EEPROM of the unit (see Appendix A). In addition, more channels are available for output (see Appendix A).

The system is protected from inadvertent write-over of the EEPROM by requiring two spacebar commands during the initialization interval to access the EEPROM or related functions.

The baud rate may be changed from the nominal value of 9600 baud by modifying the default value in the EEPROM of the unit to 38.4K, 19.2K, or 4800 baud. Please note that the Baud Rate must be 9600 when using the GPS module.

A text header is sent by the DMS during initializations that identifies the unit by part number and by serial number and gives the date of last calibration. Additionally, a line of text characters that identifies the data channel columns is sent if the serial output is set to ASCII decimal. This whole message can be temporarily or permanently suppressed or restored by a “\*” command from the interfacing computer.

Data transmission sent by the DMS can also be suppressed or restored by a “+” command from the interfacing computer.

The error over-range condition is indicated by the use of a lower case “i” or “r” when the calculated attitude or heading error exceeds the ranges listed above. Internal functions that require these error values are disabled while the condition exists. The system will continue to operate in an extended time constant mode with a low level of error accumulation until the condition is cleared. While maneuvering the vehicle, occasional blips of this condition are expected with no detectable effect on the resulting data.

The other output format available is a binary format. In this mode, the unit provides generally the same information as the decimal ASCII format, but in a compact binary message. In this format, there are nominally 13 words sent that represent 6 fourteen-bit output channels followed by a carriage return. Again, the channels may be reduced to improve the update rate by using special commands to modify the EEPROM of the unit. This format is for highly experienced users only. Consult the factory for further details.

### ***RS-232 Input Commands***

The RS-232 input commands are provided for the purpose of unit test and installation set-up. Use the same parameters that are used for the RS-232 output (9600 baud ASCII nominal, or as reset in the units EEPROM).

Note: Many commands require command or “Double spacebar mode” in order to access them. For more information on how to activate Command Mode, see the instructions in the second part of Appendix A.

These commands are available to the user (others are used at the factory for alignment and calibration).

1. An “R” or “r” will set the outputs (analog and serial) to their Reference Command modes. This will also disable the logic input Reference Command and Free Mode Command until the next time the unit is powered up. This mode is used in installation to physically align the unit. Double spacebar at initialization is required for access to this command.
2. An “I” or “i” sets the unit to Inertial mode. This is the default mode at power up and is the normal operating mode. Switching to this mode clears the Reference Command mode if it had been set by the serial input. This will also disable the logic input Reference Command and Free Mode Command until the next time the unit is powered up. Double spacebar at initialization is required for access to this command.
3. An “F” or “f” will disconnect the references from the attitude system and is the Free Mode Command. Free mode is used to make the system ignore the references during high maneuvers and brief disturbances. This mode is not intended for use except in brief intervals, since errors will grow geometrically. This will also disable the logic input Reference Command and Free Mode Command until the next time the unit is powered up. Double spacebar at initialization is required for access to this command.
4. An “H” or “h” will remove bias correction from the system and is the Hold Mode Command. This mode is useful in highly dynamic situations that may last for a few minutes. Hold mode should not be used for more than a few minutes, because errors can accumulate. Double spacebar at initialization is required for access to this command.
5. A “K” or “k” will clear the Free Mode Command and Hold Mode Command.



6. An “!” will reinitialize the unit. Further, the access to initialization is inhibited such that a spacebar command must be sent within 2.5 seconds of the “!” command for initialization to be engaged. This command does not require a double space bar at initialization to be in effect.

There are two output format commands: “\_” for decimal output and “^” for binary. See the second part of Appendix A for more information on changing output formats. There are several interface commands as well: “:” will toggle the output to send a frame of data upon receiving any non-command character and “+” will toggle the output for no output data. These and other changes can be made permanent by keying in the quote (“”) character. Double spacebar at initialization is required for access to all of these commands.

The “&” command calls a menu which allows any of several parameters to be set. From this menu, the user can change system time constants, data channels for serial output, heading source, velocity source and baud rate. Double spacebar at initialization is required for access to this command.

The commands “~”, “@”, “#”, “\$”, “(”, “)”, “{”, “}”, “[”, “<”, “>” and “?” are used by the Watson factory to calibrate the unit and should be used only with the assistance of the factory. If an undesired function is called, a “Q”, and sometimes Escape or a Delete will interrupt the command and return to operation with the least disturbance to the system. All other unspecified characters such as carriage return, line feed and space are ignored by the system.

If there are problems with the system “hanging up” during the binary output mode, check for cross-talk between the serial transmit and receive line in your installation. In addition, check to see that the communications program used is not sending an echo. This will not happen in the decimal or hexadecimal modes because command characters recognized by the system are not produced in those modes.

### ***Analog Outputs***

Analog signals are output from a 14 bit digital to analog converter through an operational amplifier. Each analog output has a 300 ohm resistor in series to eliminate oscillations from high capacitance loads. The output range for all of the analog output channels is  $\pm 10$  Volts with respect to the common signal ground. The outputs include:

<u>Signal</u>	<u>Pin</u>	<u>Range</u>	<u>Output Range</u>	<u>0 VDC</u>	<u>Scale Factor</u>
Bank	14	$\pm 180^\circ$	$\pm 10V$	$0^\circ$	$18^\circ/s/V$
Elevation	15	$\pm 90^\circ$	$\pm 5V$	$0^\circ$	$18^\circ/s/V$
Heading	16	$0-360^\circ$	$\pm 10V$	$0^\circ$ (North)	$18^\circ/s/V$
Roll Rate (X Axis)	23	$\pm 100^\circ/s$	$\pm 10V$	$0^\circ/s$	$10^\circ/s/V$
Pitch Rate (Y Axis)	24	$\pm 100^\circ/s$	$\pm 10V$	$0^\circ/s$	$10^\circ/s/V$
Yaw Rate (Z Axis)	25	$\pm 100^\circ/s$	$\pm 10V$	$0^\circ/s$	$10^\circ/s/V$
X Acceleration	17	$\pm 10g$	$\pm 10V$	$0g$	$1g/V$
Y Acceleration	18	$\pm 10g$	$\pm 10V$	$0g$	$1g/V$
Z Acceleration	19	$\pm 10g$	$\pm 10V$	$0g$	$1g/V$
Forward Acceleration	20	$\pm 10g$	$\pm 10V$	$0g$	$1g/V$
Lateral Acceleration	21	$\pm 10g$	$\pm 10V$	$0g$	$1g/V$
Vertical Acceleration	22	$\pm 10g$	$\pm 10V$	$0g$	$1g/V$

Note that the analog switches are disabled after certain serial commands are sent to the unit. This prevents software/hardware switch conflicts.

### ***Analog Inputs***

In an effort to make this system more versatile, the DMS allows the user to input analog data that can then be added to the serial data output. This allows the system to act as a data acquisition unit for other vehicle information such as engine RPM, engine temperature, fuel remaining, altitude/depth or any other important data. The four analog user inputs as well as the velocity input have one megohm input impedance, 16 bit A/D conversion resolution,  $\pm 10$  volt input range and have a bandwidth of DC to 25 Hertz.

### ***Speed Inputs***

A vehicle speed input is used to assist in the correction of errors. It is also included in the parameter set that is available for serial output. Although its use is not always required, it is highly recommended that this signal be supplied to the DMS. The unit can receive speed information in two formats, an analog or digital signal.

The analog speed input signal is a voltage that is scaled to 40 KPH per volt. Forward motion should produce a positive signal with respect to signal ground. Many other velocity scale factors can be handled through simple changes in the scale factor stored in the EEPROM in the microprocessor. This can be done with a PC and the assistance of the factory.

The digital signal that the DMS can receive is from the GPS module.

### ***Output Logic Commands***

Initialization lasts 4 seconds, during which time the "Ready" signal is set low (0v). Once initialization is complete, the "Ready" signal is set high (+5VDC). The ready signal is on pin 9 of the 25 pin connector.

### ***Input Logic Commands***

The DMS also has several digital inputs that are all activated by connecting to signal ground. The user should only apply a ground because all the inputs have a pull-up resistor to +5VDC. The pins are as follows:

- a) Initialization - Resets all angle integrators. The unit should be in a non-accelerated condition if this command is given. Leave pin open if not in use. Ground to command.
- b) Reference - An alternate set of sensor information primarily intended as an instrumentation mode. Leave pin open if not in use. Ground to command.
- c) Coast (Free Inertial) – In this mode, the attitude is computed from gyro data only. Free mode is used when extreme accelerations are expected. Leave pin open if not in use. Ground to command.

NOTE: The analog digital inputs are all disabled if any equivalent serial command is sent via RS-232. This is to prevent hardware/software conflicts.

# Specifications

## Attitude

Range: Bank	±180°	
Range: Elevation	±90°	
Resolution:	0.02°	Binary mode (14 bit)
Analog Scale Factor:	18°/V	±10V Bank ±5V Elevation

Accuracy: Static	±0.25°
* Accuracy: Dynamic	±0.5%

## GPS Heading

Range:	0° - 360°	
Resolution:	0.02°	Binary mode (14 bit)
Analog Scale Factor:	18°/V	±10V Output
Accuracy: Static	±0.5° (±0.05°/sec stationary)	Relative, based on gyro drift
* Accuracy: Dynamic or Relative	±0.5%	

## Angular Rate

Range: Roll, Pitch, Yaw	±100°/sec	
Resolution:	0.025°/sec	Binary mode (14 bit)
Analog Scale Factor:	10°/sec/V	±10V Output
Scale Factor Accuracy:	0.5%	
Bias: Roll, Pitch, Yaw	< 0.2°/sec (Analog)	±0.02°/sec Binary mode (14 bit)
Non-Linearity:	< 0.1%	Full scale range
Bandwidth:	20 Hz	
Noise:	< 0.03°/sec rms	

## Acceleration

Range: X, Y, Z	±10g	
Range: Forward, Lateral, Vertical	±10g	
Resolution:	4mg	
Analog Scale Factor:	1g/V	±10V Output
Scale Factor Accuracy:	1%	
Bias: X, Y, Z	< 10mg	
Non-Linearity:	0.1%	Full scale range
Bandwidth:	3 Hz	

## GPS Positioning

Range: Latitude	±90°	
Range: Longitude	±180°	
Range: Altitude	0ft to 21500ft	
Resolution: Latitude, Longitude	0.0000013°	Binary mode (28 bit)
Resolution: Altitude	2 ft	
Accuracy: Latitude, Longitude	1.5m rms	

## Environmental

Temperature: Operating	-40°C to +85°C	
Temperature: Storage	-55°C to +85°C	
Vibration: Operating	5g rms	20 Hz to 2 KHz
Vibration: Survival	10g rms	20 Hz to 2 KHz
Shock: Survival	500g	10mS ½ sine wave

## Electrical

Frame Rate:	71.1 Hz	Maximum
Startup Time: Data	5 sec	
† Startup Time: Satellite Acquisition	5 min	Typical
Input Power:	10 to 30VDC	5.5W
Input Current:	458mA @ 12VDC	229mA @ 24VDC
Input Velocity: (Optional)	±10VDC	Full scale (±400kph)
Digital Output:	RS-232	
Analog Output:	±10VDC	
Analog Output Impedance:	300 Ohm	Per line

## Physical

Axis Alignment:	< 0.1°	
Size: Including Mounting Flanges	6.5"W x 6.5"L x 3.1"H	16.5 x 16.5 x 7.9 (cm)
Weight:	52oz (3.2lb)	1470 grams (1.5Kg)
Connection: RS-232	9 pin female "D" subminiature	
Connection: Power / Analog Outputs	25 pin male "D" subminiature	
Connection: Antenna	SMA	Antenna cable length: 3.0m


\* Using velocity data with GPS mode on.




Actual accuracy can be calculated as the listed percentage multiplied by the change in value over the entire dynamic maneuver.

† Acquisition time for GPS units is typical for the contiguous United States. Acquisition time may differ due to interference in your geographic area.

- Specifications are subject to change without notice.
- This product may be subject to export restrictions. Please consult the factory.

## Connections / Dimensions

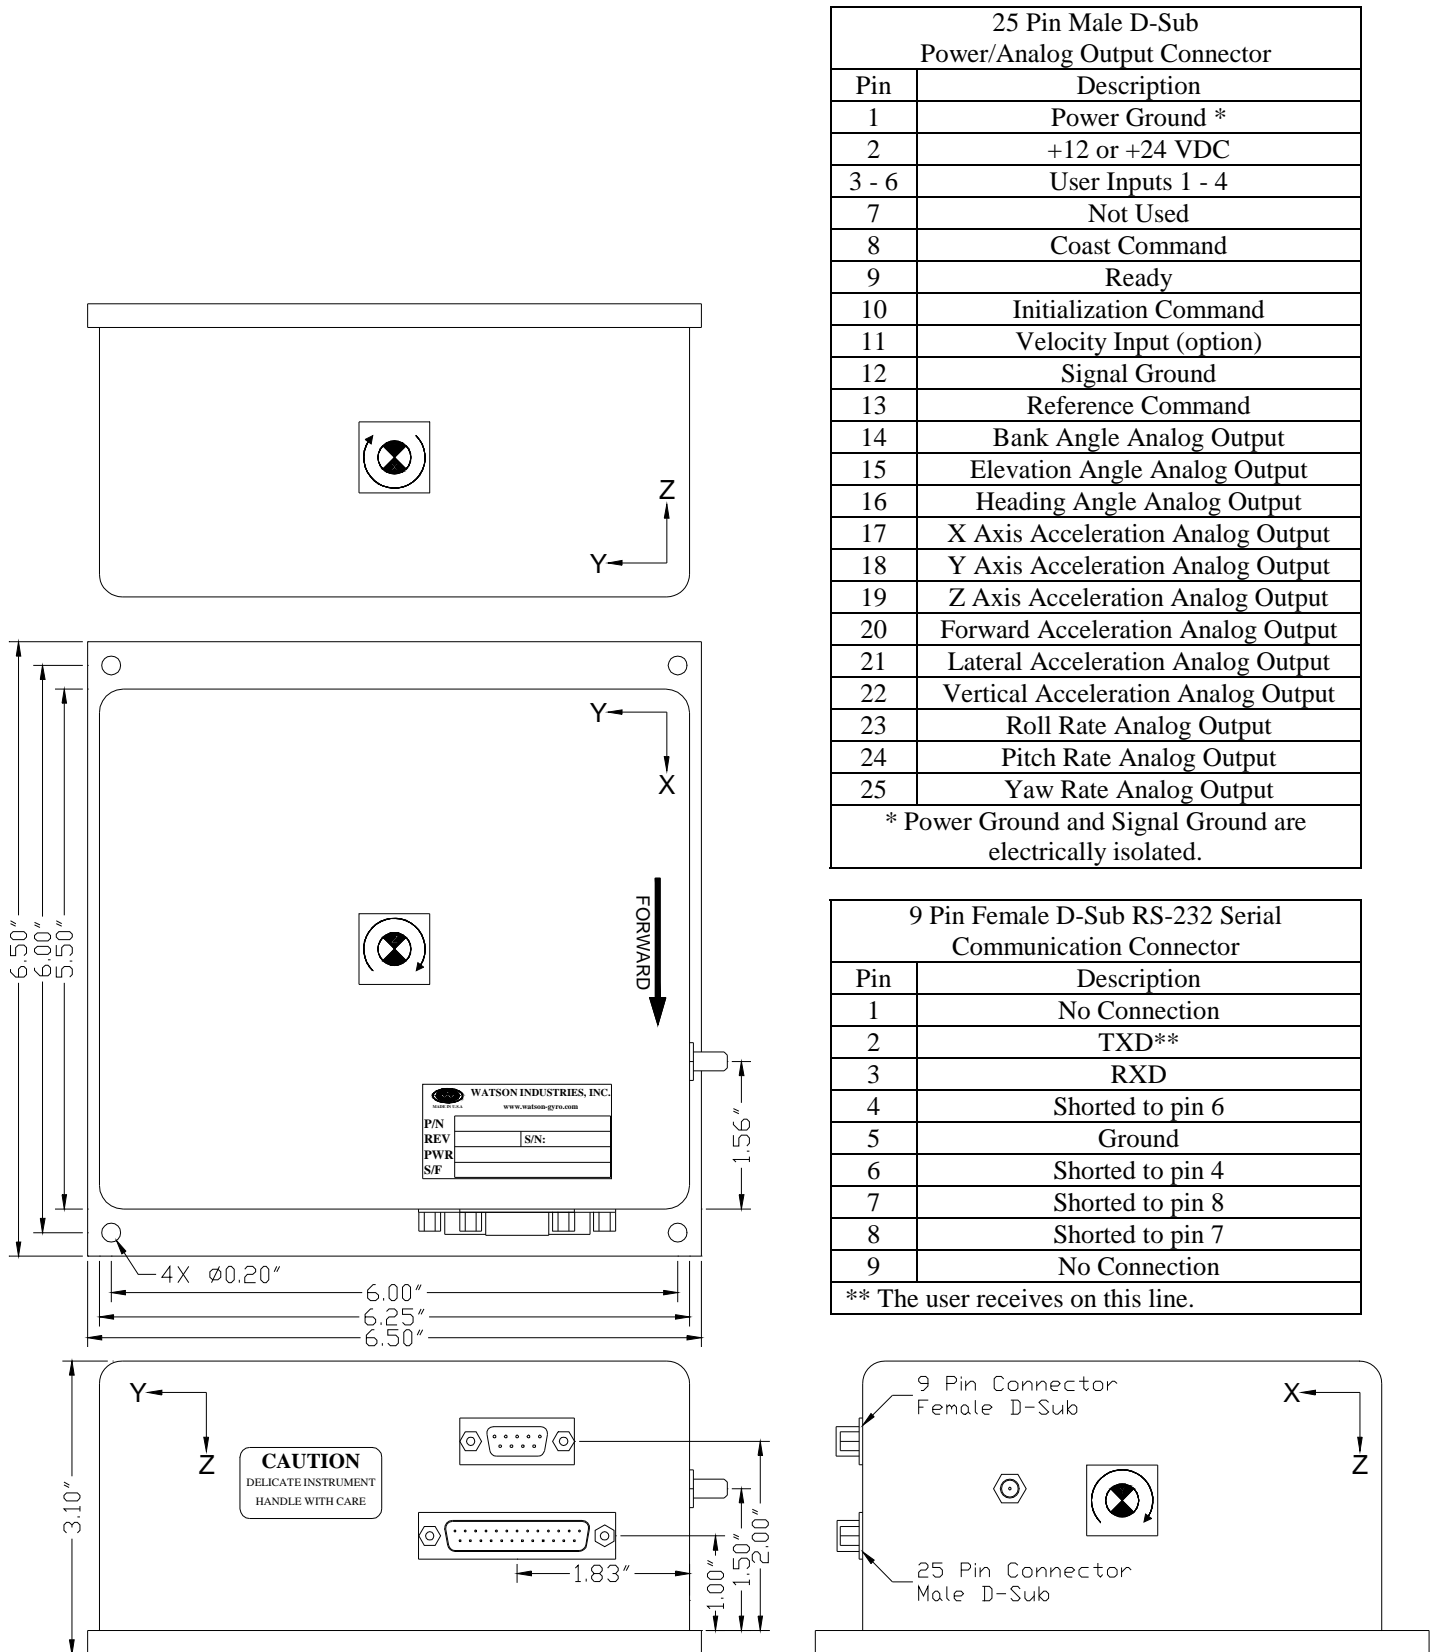

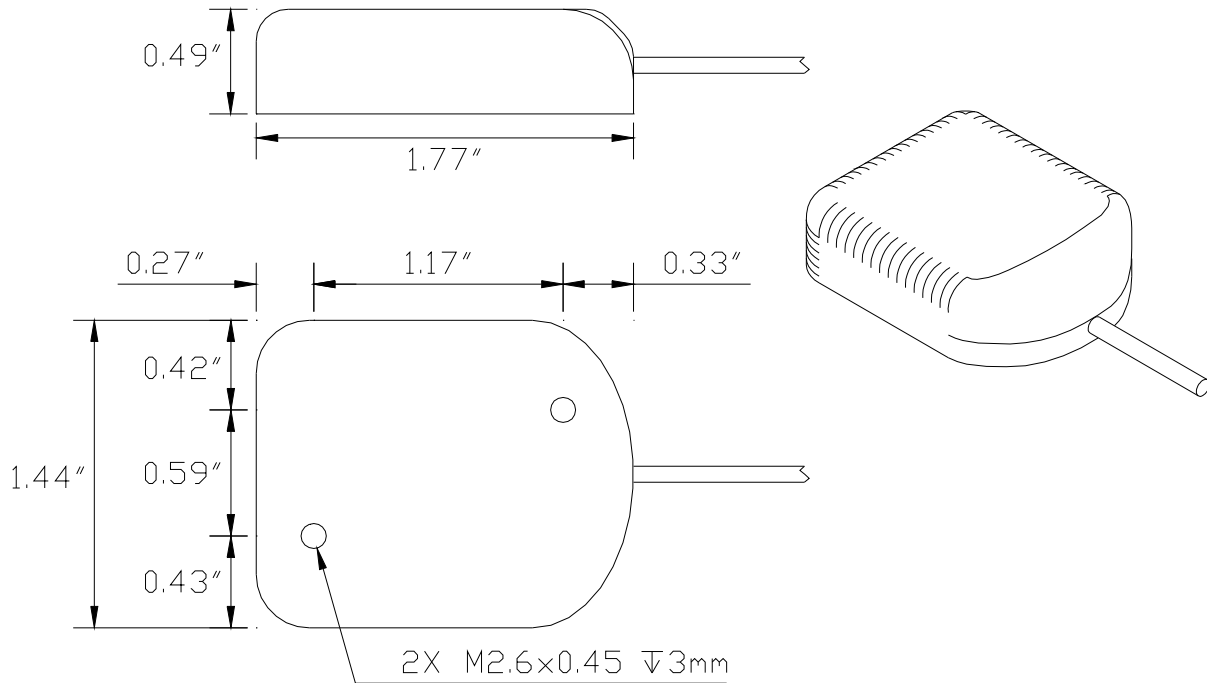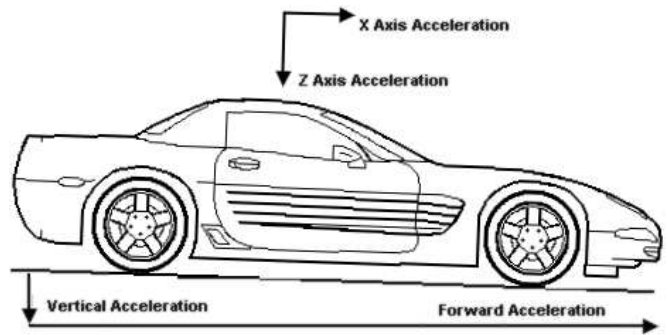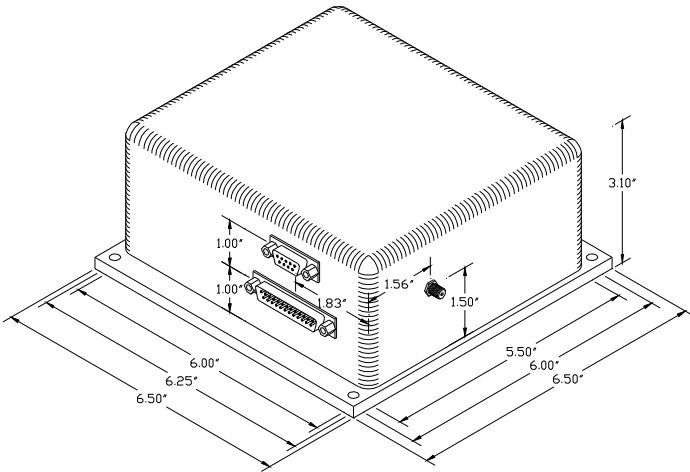

**Figure 2 Antenna Dimensions**

## **Warning**

Rough handling, dropping, or miswiring this unit is likely to cause damage.

### **DISCLAIMER**

The information contained in this manual is believed to be accurate and reliable; however, it is the user's responsibility to test and to determine whether a Watson Industries' product is suitable for a particular use.

Suggestion of uses should not be taken as inducements to infringe upon any patents.

### **WARRANTY**

Watson Industries, Inc. warrants, to the original purchaser, this product to be free from defective material or workmanship for a period of two full years from the date of purchase. Watson Industries' liability under this warranty is limited to repairing or replacing, at Watson Industries' sole discretion, the defective product when returned to the factory, shipping charges prepaid, within two full years from the date of purchase. The warranty described in this paragraph shall be in lieu of any other warranty, express or implied, including but not limited to any implied warranty of merchantability or fitness for a particular purpose.

Excluded from any warranty given by Watson Industries are products that have been subject to abuse, misuse, damage or accident; that have been connected, installed or adjusted contrary to the instructions furnished by seller; or that have been repaired by persons not authorized by Watson Industries.

Watson Industries reserves the right to discontinue models, to change specifications, price or design of this product at any time without notice and without incurring any obligation whatsoever.

The purchaser agrees to assume all liabilities for any damages and/or bodily injury that may result from the use, or misuse, of this product by the purchaser, his employees or agents. The purchaser further agrees that seller shall not be liable in any way for consequential damages resulting from the use of this product.

No agent or representative of Watson Industries is authorized to assume, and Watson Industries will not be bound by any other obligation or representation made in connection with the sale and/or purchase of this product.

### **PRODUCT LIFE**

The maximum expected life of this product is 20 years from the date of purchase. Watson Industries, Inc. recommends the replacement of any product that has exceeded the product life expectation.

## **Customer Service**

All repairs, calibrations and upgrades are performed at the factory. Before returning any product, please contact Watson Industries to obtain a Returned Material Authorization number (RMA).

### **Return Address & Contact Information**

Watson Industries, Inc.  
3035 Melby Street  
Eau Claire, WI 54703  
ATTN: Service Department  
Telephone: (715) 839-0628      Fax: (715) 839-8248      email: support@watson-gyro.com

### **Returning the Product**

Product shall be packaged making sure there is adequate packing around all sides. Correspondence shall include:

- Customer's Name and Address
- Contact Information
- Equipment Model Number
- Equipment Serial Number
- Description of Fault

**It is the customer's responsibility to pay all shipping charges from customer to Watson Industries, including import and transportation charges.**

## Appendix A

The following outputs are available via the RS-232 serial link. Their full-scale ranges are listed for both decimal and binary format.

<u>Inertial Output</u>	<u>Full Scale Decimal</u>	<u>Full Scale Binary</u>
Time Since Reset	UTC <sup>1</sup>	Seconds since Reset
	HHMMSS	16,383 seconds
Bank Angle	±179.9°	±180°
Elevation Angle	±89.9°	±180°
Heading Angle	0.0 to 359.9°	±180°
X Accelerometer	±9.99 G	±10 G
Y Accelerometer	±9.99 G	±10 G
Z Accelerometer	±9.99 G	±10 G
Forward Acceleration	±9.99 G	±10 G
Lateral Acceleration	±9.99 G	±10 G
Vertical Acceleration	±9.99 G	±10 G
X Angular Rate	±99.9 °/s	±200 °/s
Y Angular Rate	±99.9 °/s	±200 °/s
Z Angular Rate	±99.9 °/s	±200 °/s
Heading Rate	±99.9 °/s	±200 °/s
Corrected Bank Pendulum (simulated)	±179.9°	±180°
Corrected Elevation Pendulum (simulated)	±89.9°	±180°
User Channel 1	±9.99 VDC	±10 VDC
User Channel 2	±9.99 VDC	±10 VDC
User Channel 3	±9.99 VDC	±10 VDC
User Channel 4	±9.99 VDC	±10 VDC
Ground Track <sup>2</sup> / Forward Velocity	±399.9 Km/hr	±400 Km/hr
Latitude <sup>3</sup>	±89.99999	±90° (4 bytes)
Longitude <sup>3</sup>	±179.99999	±180° (4 bytes)
Altitude <sup>4</sup>	21500 Feet	21500 Feet (2 Feet/count)
Temperature	-40° to 88°C	-40° to 88°C (7 bit)
Status Bits	3 ASCII chars representing Octal digits	1 byte
Flag Bits	3 ASCII chars representing Octal digits	1 byte

<sup>1</sup> Note: The GPS universal time (UTC) field is filled with asterisks when the data is invalid.  
(“\*\*\*\*\*”)

<sup>2</sup> Note: The Ground Track Velocity field is filled with asterisks when the data is invalid.  
(“\*\*\*.\*”)

<sup>3</sup> Note: The Latitude & Longitude fields are filled with asterisks when the data is invalid. (“+\*.\*\*\*\*\*\* +\*.\*.\*\*\*\*\*\*”)

<sup>4</sup> Note: The Altitude field is filled with asterisks when the data is invalid.  
(“\*\*\*\*\*”)

The Status Bits contain the following information:

Bit	Description (If Set)
0	Bank Error Flag
1	Elevation Error Flag
2	Heading Error Flag
3	System Error Flag
4	Velocity Error Flag
5	Ready Flag
6	Checksum Error Flag
7	Not Used (always zero)

Example: The status channel output in ASCII Decimal is “146”

Octal Digit	1		4			6		
Binary Equivalent	0	1	1	0	0	1	1	0
Status Bit #	7	6	5	4	3	2	1	0



Bit 7	Reset	
Bit 6	Set	Checksum Error
Bit 5	Set	Ready
Bit 4	Reset	No Velocity Error
Bit 3	Reset	No System Error
Bit 2	Set	Heading Error
Bit 1	Set	Elevation Error
Bit 0	Reset	No Bank Error

The Flag Bits contains the following information:

Bit	Description
0	GPS Heading fail.
1	GPS Velocity fail.
2	Not used (always zero)
3	Reference Command selected
4	GPS enabled
5	Free Mode selected
6	Analog Switches disabled
7	Not used (always zero)

Example: The flag channel output in ASCII Decimal is "120"

Octal Digit	1		2			0		
Binary Equivalent	0	1	0	1	0	0	0	0
Status Bit #	7	6	5	4	3	2	1	0

Bit 7	Reset	
Bit 6	Set	Analog Switches Disabled
Bit 5	Reset	Not in Free Mode
Bit 4	Set	GPS Enabled
Bit 3	Reset	Not in Reference Mode
Bit 2	Reset	
Bit 1	Reset	Valid GPS velocity data
Bit 0	Reset	Valid GPS heading data

## **Activating Command mode or Double Spacebar Access to commands**

Hook the unit up to your computers serial port.  
Use HyperTerminal program to interface with unit.

Turn on unit. Wait for the startup message to appear on display.  
Hit the space bar twice within the first 5 seconds of turn on.  
Sometimes it takes a few tries to get the hang of this.  
Wait for the data string to start transmitting.

Now the unit will take in the keyboard commands.

## **Determining and Setting Output Channels**

Activate Command Mode (See above)

To determine which channel present, first type '&'.  
This will bring up the menu:

```
TYPE IN THE NUMBER OF YOUR SELECTION (OR 'Q' TO QUIT):
  1 = ADJUST TIME CONSTANTS
  2 = SET OUTPUT CHANNELS
  3 = LIST CURRENT OUTPUT CHANNEL SELECTION
  4 = SELECT HEADING SOURCE
  5 = SELECT VELOCITY SOURCE
  6 = SELECT ALTITUDE CORRECTION
  7 = SET NEW BAUD RATE
```

Typing in '3' will show which channels are currently active.

To change which channels are output type '&'(this will bring up the menu again)

Now type '2' to set up channels  
The following message will appear:

```
TO SET FOR OUTPUT FOR ANY OF THE FOLLOWING DATA ITEMS, PRESS Y
TO AVOID ANY OF THE FOLLOWING DATA ITEMS, PRESS N
TO QUIT AND DISREGARD ANY OTHER DATA, PRESS Q

*** DO YOU WANT TO PROCEED? (Y/N/Q)
```

To proceed type 'Y' or "y"  
Now each channel will come up one at a time  
For example:

```
DO YOU WANT OUTPUT OF TIME?
```

Type 'Y' or "y" to output channel, type 'N' or "n" to remove channel  
When you get to bottom of list, this message will appear:

```
Y = GOBACK, N = INSTALL DATA & QUIT, Q = QUIT
DO YOU WANT TO TRY TO SET DATA AGAIN?
```

To accept channels type 'N' or "n", then hit space bar output data to resume.

To make this channel selection the default the next time you power the unit on type in " (a quote mark)

## **Setting Output Format**

There are two output formats:

Decimal output – “\_” Command.

Binary output – “^” Command.

To change the output format:

Activate Command Mode (See above).

Press the key Command corresponding to the format you want to switch into.

To make this channel selection the default the next time you power the unit on type in " (a quote mark.)

## **Setting Heading Mode**

Activate Command Mode (See above).

To set the heading mode, type in &.

This will bring up the menu:

```
TYPE IN THE NUMBER OF YOUR SELECTION (OR 'Q' TO QUIT):
  1 = ADJUST TIME CONSTANTS
  2 = SET OUTPUT CHANNELS
  3 = LIST CURRENT OUTPUT CHANNEL SELECTION
  4 = SELECT HEADING SOURCE
  5 = SELECT VELOCITY SOURCE
  6 = SELECT ALTITUDE CORRECTION
  7 = SET NEW BAUD RATE
```

Typing in '4' will bring up this menu:

```
SELECTION HEADING SOURCE (OR 'Q' TO QUIT):
  1 = GPS TRUE NORTH GROUND TRACK HEADING
  2 = RELATIVE HEADING
```

To set the heading mode to Track Heading type '1'. To use this mode, the GPS antenna must be connected to the DMS.

To set the heading mode to Relative Heading type '2'. This is the normal DMS mode (non-GPS). In this mode, the GPS antennas do not need to be connected.

To make any of these modes the default the next time you power the unit on type in " (a quote mark.)

## **Setting Velocity Mode:**

Activate Command Mode (See above).

To set the velocity mode, type &.

This will bring up the menu:

```
TYPE IN THE NUMBER OF YOUR SELECTION (OR 'Q' TO QUIT):
  1 = ADJUST TIME CONSTANTS
  2 = SET OUTPUT CHANNELS
  3 = LIST CURRENT OUTPUT CHANNEL SELECTION
  4 = SELECT HEADING SOURCE
  5 = SELECT VELOCITY SOURCE
  6 = SELECT ALTITUDE CORRECTION
  7 = SET NEW BAUD RATE
```

Typing in '5' will bring up this menu:

```
SELECTION VELOCITY SOURCE (OR 'Q' TO QUIT):
  1 = GPS GROUND TRACK VELOCITY
  2 = ANALOG VELOCITY
```

To set to GPS Ground Velocity type '1'. This is the mode when using the GPS module.

To set to Analog Velocity type '2'. This is the normal DMS mode (non-GPS). Make sure that the proper analog velocity signal is applied.

To make this selection the default the next time you power the unit on type in " (a quote mark.)

## Setting Altitude Correction:

Activate Command Mode (See above).

To set the Altitude Correction, type &.

This will bring up the menu:

```
TYPE IN THE NUMBER OF YOUR SELECTION (OR 'Q' TO QUIT):  
  1 = ADJUST TIME CONSTANTS  
  2 = SET OUTPUT CHANNELS  
  3 = LIST CURRENT OUTPUT CHANNEL SELECTION  
  4 = SELECT HEADING SOURCE  
  5 = SELECT VELOCITY SOURCE  
  6 = SELECT ALTITUDE CORRECTION  
  7 = SET NEW BAUD RATE
```

Typing in '6' will bring up this menu:

```
SELECTION ALTITUDE CORRECTION (OR 'Q' TO QUIT):  
  1 = GPS GEODETIC CORRECTION  
  2 = NO CORRECTION
```

To turn on Altitude Correction type '1'.

To shut off Altitude Correction type '2'.

To make this selection the default the next time you power the unit on type in " (a quote mark.)

## Appendix B

# Sensor Test Instructions

Tests within this section have been designed to allow the user to verify the correct operation of the sensor without the use of elaborate test equipment other than a means of accurately observing the outputs. The “HyperTerminal” program provides a suitable means of observing the outputs.

### B.1 Parameter Exercise Test

After successful initialization, move the sensor in all three axes using both linear and angular motion, making certain each of the measurement parameters responds to the motion.

### B.2 Angular Displacement Scale Factor Tests

After successful initialization, place the sensor on a level surface and observe the pitch and roll displacement signals. Place the sensor on a pivot and incline the sensor by a small angle of 6 to 10 degrees in the pitch. A suitable pivot is a 10mm square bar attached to the sensor base plate with adhesive tape. Give the "Reference" command. The signals from the simulated pendulums will be output instead of the normal angular displacement signals. Careful note should be taken of the angles indicated in the reference mode. The sensor should then be tipped on the pivot into the other stable position and the angle again noted.

The procedure of tipping the sensor should be repeated in “Inertial Mode”. The angles obtained should agree with those noted in “Reference Mode”.

Repeat this procedure for the Roll axis. The same pivot may be used, but some care will be needed to avoid exceeding the 100 °/second limit. A more appropriate size of bar would be 5mm square.

### B.3 Accelerometer Scale Test

After successful initialization, place the sensor on a level surface and monitor the acceleration outputs. Observe that the X and Y outputs read near zero while the Z axis will read -1G within the accuracy of the sensor.

Set the sensor at a 45° angle to the horizontal in Pitch only. The value of X and Z acceleration should read 0.71G, within the accuracy of the sensor, while the Y acceleration should remain at the level value. The values of Forward, Lateral and Vertical Acceleration should remain at the values when level.

Repeat the test for the roll axis of the sensor. Under this test, Y and Z acceleration will read 0.71G and the X acceleration will retain its value at level.

#### **B.4 Leveled Accelerometer Test**

After successful initialization, place the sensor on a level surface, and observe the pitch and roll displacement signals as well as acceleration outputs.

The Forward, Lateral and Vertical outputs should correspond to the X, Y and Z outputs to within the accuracy of the sensor.

Set the sensor at a 45° angle to the horizontal in pitch only, taking care not to move the sensor at an angular rate of more than 100 °/sec.

The Forward, Lateral and Vertical Acceleration outputs should not change from the values at level by more than the accuracy of the sensor.

Move the sensor through a further 45 degrees in pitch such that the baseplate is now vertical, again taking care not to exceed the 100 °/sec limit. The sensor should then be rotated about the vertical and the Yaw output will respond accordingly.

The test should then be repeated for the Roll axis.

# Appendix C

## Binary Data Format


The unit will output up to 6 words at 71.11 frames per second set at 9600 Baud. One word per output parameter.

Example 1: The Unit is seeing these conditions:

Bank	Elevation	Heading	X angular rate	Y angular rate	Z angular rate
15.0°	-5.0°	315.0°	10.0°/sec	-15.0°/sec	55.0°/sec

### 2) Binary output Format:

Word1	Word2	Word3	Word4	Word5	Word6	<CR> byte
0x85AA	0xFE9C	0xF080	0x8399	0xFB99	0x91CC	0x0D

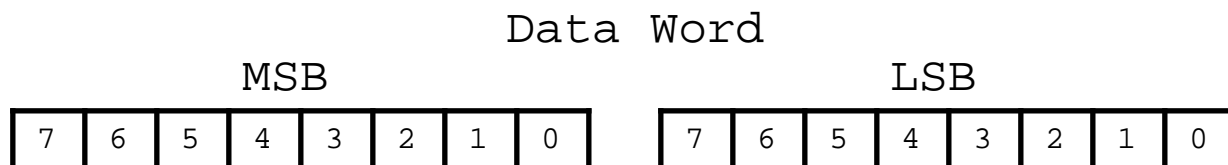

Bit 7 of the MSB is set to 1. Bits 6 to 0 of the MSB are the upper 7 bits of the data. (sign plus 6 bits of data)  
 Bit 7 of the LSB is set to 1. Bits 6 to 0 of the LSB are the lower 7 bits of the data.

As the data words are received, the LSB is shifted left to shift out the 7th bit (always set to 1). The MSB is then connected to the LSB as a 16 bit word. This word is then shifted left to shift out the 7th bit (always set to 1). What remains is a signed fractional word with a resolution of 13 bits plus a sign bit.

To convert binary data:

Bank	Elevation	Heading	X Rate	Y Rate	Z Rate
0x85AA	0xFE9C	0xF080	0x8399	0xFB99	0x91CC

Need split each word into two bytes:

Bank	Elevation	Heading	X Rate	Y Rate	Z Rate
0x85 0xAA	0xFE 0x9c	0xF0 0x80	0x83 0x99	0xFB 0x99	0x91 0xCC

Remove the most significant bit from each byte:

Bank	Elevation	Heading	X Rate	Y Rate	Z Rate
0x05 0x2A	0x7E 0x1C	0x70 0x00	0x03 0x19	0x7B 0x19	0x11 0x4C



Shift lower byte left once (to remove 1 bit space between bytes):

Bank	Elevation	Heading	X Rate	Y Rate	Z Rate
0x05	0x7E	0x70	0x03	0x7B	0x11
0x54	0x38	0x00	0x32	0x32	0x98

Shift lower & upper bytes left once (to remove 1 bit space a top of high byte):

Bank	Elevation	Heading	X Rate	Y Rate	Z Rate
0x0A	0xFC	0xE0	0x06	0xF6	0x23
0xA8	0x70	0x00	0x64	0x64	0x30

Convert from hexadecimal to decimal counts:

Bank	Elevation	Heading	X angular rate	Y angular rate	Z angular rate
2728	64624	57344	1636	63076	9008

Correct bank, elevation, and angular rates for the sign  
If >32767 then subtract 65536 from the data

Bank	Elevation	Heading	X angular rate	Y angular rate	Z angular rate
2728	-912	57344	1636	-2460	9008

Convert to units: counts x scale factor

For bank & elevation: Scale factor is:  $180^\circ / 32768$  counts  
 For heading: Scale factor is:  $360^\circ / 65536$  counts  
 For Angular Rates: Scale factor is:  $(200^\circ/\text{sec}) / 32768$  counts


Bank	Elevation	Heading	X angular rate	Y angular rate	Z angular rate
14.991 °	-5.010 °	315 °	9.985 °/sec	-15.015 °/sec	54.980 °/sec

Example 2: The Unit is seeing these conditions:

X Acceleration	Y Acceleration	Z Acceleration	X angular rate	Y angular rate	Z angular rate
0.00 g	-0.28 g	-0.96g	10.0°/sec	-15.0°/sec	55.0°/sec

**2) Binary output Format:**

Word1	Word2	Word3	Word4	Word5	Word6	<CR> byte
0x8080	0xFE9A	0xF9EE	0x8399	0xFB99	0x91CC	0x0D

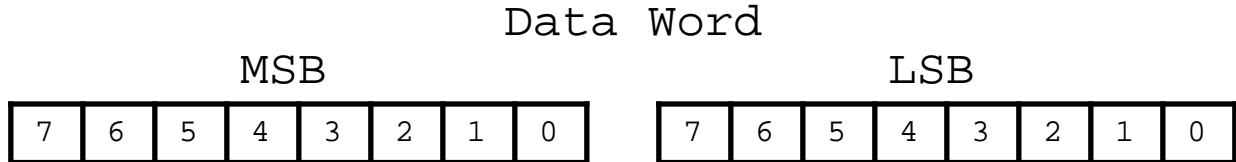

Bit 7 of the MSB is set to 1. Bits 6 to 0 of the MSB are the upper 7 bits of the data. (sign plus 6 bits of data)  
 Bit 7 of the LSB is set to 1. Bits 6 to 0 of the LSB are the lower 7 bits of the data.

As the data words are received, the LSB is shifted left to shift out the 7th bit (always set to 1). The MSB is then connected to the LSB as a 16 bit word. This word is then shifted left to shift out the 7th bit (always set to 1). What remains is a signed fractional word with a resolution of 13 bits plus a sign bit.

To convert binary data:

X Accel	Y Accel	Z Accel	X Rate	Y Rate	Z Rate
0x8080	0xFE9A	0xF9EE	0x8399	0xFB99	0x91CC

Need split each word into two bytes:

X Accel	Y Accel	Z Accel	X Rate	Y Rate	Z Rate
0x80	0xFE	0xF9	0x83	0xFB	0x91
0x80	0x9A	0xEE	0x99	0x99	0xCC

Remove the most significant bit from each byte:

X Accel	Y Accel	Z Accel	X Rate	Y Rate	Z Rate
0x00	0x7E	0x79	0x03	0x7B	0x11
0x00	0x1A	0x6E	0x19	0x19	0x4C

Shift lower byte left once (to remove 1 bit space between bytes):

X Accel	Y Accel	Z Accel	X Rate	Y Rate	Z Rate
0x00	0x7E	0x79	0x03	0x7B	0x11
0x00	0x34	0xDC	0x32	0x32	0x98

Shift lower & upper bytes left once (to remove 1 bit space a top of high byte):

X Accel	Y Accel	Z Accel	X Rate	Y Rate	Z Rate
0x00	0xFC	0xF3	0x06	0xF6	0x23
0x00	0x68	0xB8	0x64	0x64	0x30

Convert from hexadecimal to decimal counts:

X Accel	Y Accel	Z Accel	X angular rate	Y angular rate	Z angular rate
0	64616	62392	1636	63076	9008

Correct bank, elevation, and angular rates for the sign  
If >32767 then subtract 65536 from the data

X Accel	Y Accel	Z Accel	X angular rate	Y angular rate	Z angular rate
0	-920	-3144	1636	-2460	9008

Convert to units: counts x scale factor

For Bank & Elevation: Scale factor is:  $180^\circ / 32768$  counts

For Heading: Scale factor is:  $360^\circ / 65536$  counts

For Accelerations: Scale factor is  $10g / 32768$  counts

For Angular Rates: Scale factor is:  $(200^\circ/\text{sec}) / 32768$  counts

X Accel	Y Accel	Z Accel	X angular rate	Y angular rate	Z angular rate
0.0000g	-0.2808g	-0.9595g	9.985 $^\circ/\text{sec}$	-15.015 $^\circ/\text{sec}$	54.980 $^\circ/\text{sec}$

9600 Baud  
8 Bit Data  
1 Start Bit  
1 Stop Bit  
No Parity