

Dual Axis Vertical Reference System

Owner's Manual

PART NUMBER: VRS-E232-1AD



**WATSON INDUSTRIES, INC.
3035 MELBY STREET
EAU CLAIRE, WI 54703**

Phone: (715) 839-0628

FAX: (715) 839-8248

Email: support@watson-gyro.com

Table of Contents

Introduction.....	3
Product Description	3
Installation	3
Orientation:	3
Mounting:.....	3
Environment:	3
Power:	4
Theory of Operation	4
Specifications.....	5
Analog Output	6
RS-232 Digital Output.....	6
RS-232 Output Format	7
RS-232 Input Commands	9
Connections	10
Dimensions	11
Warning	12
DISCLAIMER	12
WARRANTY.....	12
PRODUCT LIFE	12
Customer Service.....	13
Appendix A.....	14
Appendix B	15
Activating Command Mode (Double Spacebar Mode).....	15
Accessing the Main Menu.....	15
Appendix B.1 Adjust Time Constants.....	15
Appendix B.2 Set Output Channels.....	16
Appendix B.3 List Output Channels	16
Appendix B.4 Set Baud Rate.....	16
Appendix C.....	18

Watson Industries prides itself on solving customer problems and serving their needs in a timely fashion. This manual is intended to facilitate this goal and to provide written information about your product. We ask that you carefully read this manual. Becoming familiar with the manual will help you understand the product's capabilities and limitations, as well as provide you with a basic understanding of its operation. If, after reading the manual, you require further assistance, do not hesitate to call Watson Industries with your questions and comments.

CAUTION!

Watson Sensors are rugged devices that have been used successfully in a number of harsh environments. The components have been qualified to withstand a mechanical shock of 1000g 's or greater, and most enclosures provide near that level of protection. However, dropping a sensor from waist height onto a hard floor can cause a shock level of 600g's. At this level, given some resonance, damage is possible.

Introduction

The Watson Industries Vertical Reference represents a significant advancement in inertial sensor technology. It is a highly accurate and rugged device with many advantages over other types of angular rate and incline-sensing devices. This manual describes operation of the Watson Industries Vertical Reference and also provides useful application information to the system designer.

Product Description

The Watson Industries Vertical Reference System (VRS) is an entirely solid-state sensor that provides exceptional rejection from the adverse effects of inertia and short-term lateral accelerations. It does this through the use of both an accelerometer based vertical reference and an angular rate sensor which is integrated to provide additional information on angular position. It can be a functional replacement for mechanical gyros which are often more expensive and which cannot provide the reliability of a solid-state sensor. Theory of operation is described with more detail on page 4. Size and pinouts are described on pages 8-9. Specifications are shown on page 5.

The Watson Vertical References provide for two types of analog output voltages. One is proportional to angular rate and the other is proportional to angular displacement. Full-scale analog outputs produce an output of ± 10 volts dependent upon the direction of angular position or rotation. During rotation, positive voltage output occurs in the direction of the rotational arrow on the case. At horizontal and zero angular rotation rate, both outputs for displacement and rotation rate are near zero. A power supply, providing +10 to +30 Volts DC, is required to operate the unit.

Special options in power supply, output voltage, scale calibration, and special packaging are available as custom units. Pricing and delivery information on custom units is available by contacting the factory.

Installation

Orientation:

The base plate of the unit is to be mounted on top of a horizontal surface with the connector toward the forward direction of the vehicle. The VRS drawing, with wire call outs, is located in Figure 2. The VRS is a rugged device and will withstand harsh environments. However, due attention needs to be paid to the nature of the sensor and its prime function, which is to measure attitude and motion.

Mounting:

The unit has four 0.15" diameter mounting holes for using 6-32 screws. A mounting plate is provided for a flat surface mount. The unit may be adhesively mounted at any of its surfaces. If high shock loads are expected, greater than 100G or repeated shocks greater than 20G, the appropriate shock mounting should be used to prevent damage. Vibration isolation should be used when the sensor will be operating in 4G or greater vibration environments.

Environment:

Avoid mounting sites that are subject to significant temperature variation over the duration of the test. Temperature variation will induce significant rate sensor bias drift, which will reflect in poor attitude accuracy.

For shipboard applications, install the sensor near the center of gravity. For all applications, it is preferable to install the device where linear dynamic effects are minimized.

Specifications

Attitude

Range: Bank	±180° (±30°)	Digital (Analog)
Range: Elevation	±90° (±30°)	Digital (Analog)
Resolution:	0.02°	Binary mode (14 bit)
Analog Scale Factor:	3°/V	±10V Output
Accuracy: Static	±0.3°	(up to 75°)
* Accuracy: Dynamic	0.5%	

Angular Rate

Range: Roll, Pitch	±100°/sec	
Resolution:	0.025°/sec	Binary mode (14 bit)
Analog Scale Factor:	10°/sec/V	±10V Output
Scale Factor Accuracy:	0.5%	
Bias: Roll, Pitch	< 0.2°/sec (Analog)	±0.02°/sec Binary mode (14 bit)
	< 0.1°/sec (Digital)	
Non-Linearity:	< 0.1%	Full scale range
Bandwidth:	20 Hz	
Noise:	< 0.03°/sec rms	

Acceleration

Range: X, Y, Z	±10g	
Resolution:	4mg	
Scale Factor Accuracy:	1%	
Bias: X, Y, Z	< 10mg	
Non-Linearity:	0.1%	Full scale range
Bandwidth:	3 Hz	

Environmental

Temperature: Operating	-40°C to +85°C	
Temperature: Storage	-55°C to +85°C	
Vibration: Operating	5g rms	20 Hz to 2 KHz
Vibration: Survival	10g rms	20 Hz to 2 KHz
Shock: Survival	500g	10mS ½ sine wave

Electrical

Frame Rate:	284.44 Hz	Maximum
Startup Time: Data	5 sec	
Startup Time: Fully operational	10 sec	
Input Power:	10 to 30VDC	3.2W
Input Current:	225mA @ 12VDC	125mA @ 24VDC
Digital Output:	RS-232	
Analog Output:	±10VDC	
Analog Output Impedance:	300 Ohm	Per line

Physical

Axis Alignment:	< 0.25°	
Size: Including Mounting Flanges	3.24"W x 5.78"L x 4.18"H	8.2 x 14.7 x 10.6 (cm)
Weight:	29oz (1.8lb)	820 grams (0.8Kg)
Connection: RS-232 / Analog Outputs	9 pin female "D" subminiature	
Connection: Power	9 pin male "D" subminiature	

* Actual accuracy can be calculated as the listed percentage multiplied by the change in value over the entire dynamic maneuver.

- Specifications are subject to change without notice.
- This product may be subject to export restrictions. Please consult the factory.

Analog Output

Analog signals are output from a 14 bit digital to analog converter through an operational amplifier. Each analog output has a 300 ohm resistor in series to eliminate oscillations from high capacitance loads. The output range for all of the analog output channels is ± 10 Volts with respect to the common signal ground. The analog outputs can be found on the 9-pin female D-Sub connector.

The outputs include:

<u>Signal</u>	<u>Pin</u>	<u>Range</u>	<u>Output Range</u>	<u>0 VDC</u>	<u>Scale Factor</u>
Bank	6	$\pm 30^\circ$	$\pm 10V$	0°	$3^\circ/V$
Elevation	7	$\pm 30^\circ$	$\pm 10V$	0°	$3^\circ/V$
Roll Rate (X Axis)	8	$\pm 100^\circ/s$	$\pm 10V$	$0^\circ/s$	$10^\circ/s/V$
Pitch Rate (Y Axis)	9	$\pm 100^\circ/s$	$\pm 10V$	$0^\circ/s$	$10^\circ/s/V$

RS-232 Digital Output


The Digital RS-232 outputs can be found on the 9-pin female D-Sub. The Digital output pin map can be found on page 9. The RS-232 signals are referenced to the Signal Ground. The digital connections are:

1. RXD is the data receive line – pin 3. The commands are sent to unit on this line.
2. TXD is the data transmit line – pin2. User Receives data on this line.
3. Signal Ground for RS-232 signals is on pin 5.

Optional Bluetooth Wireless Communications

The VRS product line offers Bluetooth compatibility through the optional Serial to Bluetooth Module (SBM). The SBM acts as a wireless serial connection utilizing serial port protocol (SPP). The VRS requires an adapter to properly connect to the SBM allowing a bluetooth signal that will automatically be generated when the SBM is plugged in.

The Bluetooth network can be paired to any Android device or Bluetooth-enabled PC via a virtual COM port. It is often as simple as plug, power, and connect.

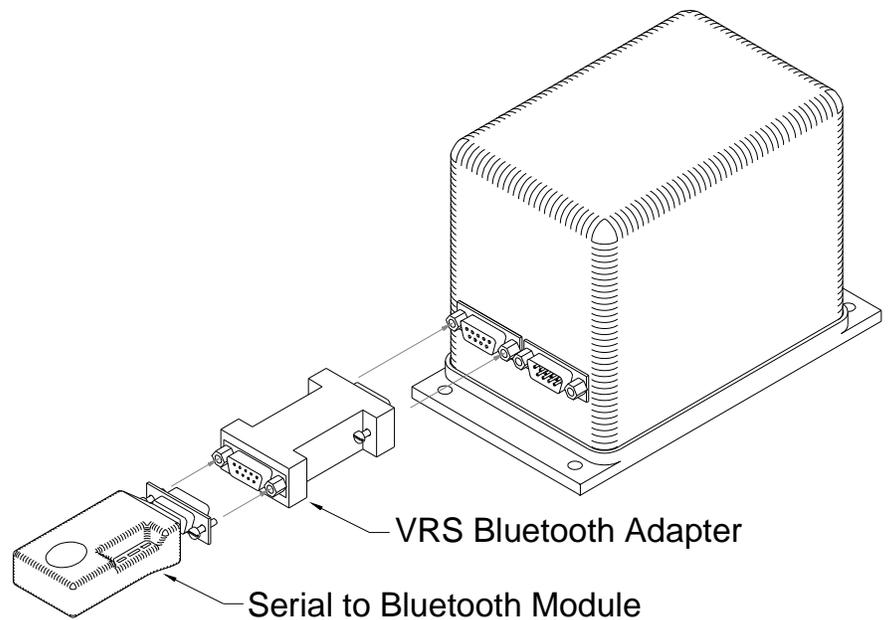

The Serial to Bluetooth Module and VRS Bluetooth Adapter are not standard features of the VRS product line, but can be obtained upon request with your order, or individually from Watson Industries.


RS-232 Output Format

The nominal RS-232 output on the 9-pin female connector consists of a string of decimal ASCII characters sent asynchronously at regular intervals at about 35.5 strings per second. The string is sent at 9600 baud with eight data bits, one stop bit and no parity. The contents of a typical string are formed as follows:

(See Appendix A for information on how to change the data string.)

1. A single letter and a space used to indicate the start of the data string. The letter “I” indicates the start of an inertial data string. The letter “R” indicates the start of a Reference data string. If the letter is in lower case (“i” or “r”), an error over-range condition is indicated (see below).
2. A seven character string representing the bank angle starting with a space, then a “+” or a “-“, followed by three digits, a decimal point and one digit and for up to ± 179.9 degrees.
3. A six character string representing the elevation angle starting with a space, then a “+” or a “-“, followed by two digits, a decimal point and one digit for up to ± 89.9 degrees.
4. A six character string representing the X axis angular rate starting with a space, then a “+” or a “-“, followed by two digits, a decimal point and one digit for up to ± 99.9 °/second.
5. A five character string representing the Y axis angular rate starting with a space, then a “+” or a “-“, followed by two digits, a decimal point and one digit for up to ± 99.9 °/second.
6. The string is terminated by a carriage return. There will then be a short interval with no data transmission before the next string begins.

Example:

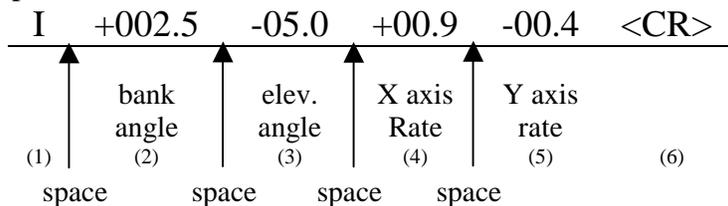

The string transmission rate can be improved by reducing the amount of information (data items) transmitted. The data items transmitted can be changed by using special commands to modify the EEPROM of the unit (see Appendix A). Additional channels are available for output (see Appendix B).

The system is protected from inadvertent write-over of the EEPROM by requiring two spacebar commands during the initialization interval to activate command mode, which is used to access the EEPROM or related functions. See Appendix B for more information.

The baud rate may be changed from the nominal value of 9600 baud by modifying the default value in the EEPROM of the unit to 38400, 19200, or 4800 baud.

A text header that is sent by the VRS during initializations identifies the unit by part number and by serial number and gives the date of last calibration. Additionally, a line of text characters that

identifies the data channel columns is sent if the serial output is set to ASCII decimal. This whole message can be temporarily or permanently suppressed or restored by a "*" command from the interfacing computer. For more information, see the RS-232 Input Commands section.

Data transmission sent by the VRS can also be suppressed or restored by a "+" command from the interfacing computer. For more information on these commands, see the RS-232 Input Commands section.

The error overrange condition is indicated by the use of a lower case "i" or "r" when the calculated attitude error exceeds the ranges listed above. Internal functions that require these error values are disabled while the condition exists. The system will continue to operate in an extended time constant mode with a low level of error accumulation until the condition is cleared. Occasional blips of this condition are expected with no detectable affect on the resulting data.

The other output format available is a binary format. The binary format provides generally the same information as the decimal ASCII format, but in a compact binary file format. In this format, there are nominally 9 bytes sent that represent 4 fourteen-bit output channels followed by a carriage return. Again, this may be reduced to attitude information to improve the update rate (in this case the rate would be 284.44 Hz) by using special commands to modify the EEPROM of the unit. This format is for highly experienced users only. See Appendix C for further details.

RS-232 Input Commands

The RS-232 input commands are provided for the purpose of unit test and installation set-up. Use the same parameters that are used for the RS-232 output (9600 baud ASCII nominal, or as reset in the units EEPROM).

Note: Many commands require command or “Double spacebar mode” in order to access them. For more information on how to activate Command Mode, see the instructions in Appendix B.

These commands are available to the user (others are used at the factory for alignment and calibration).

1. An “R” or “r” will set the outputs (analog and serial) to their Reference Command modes. This mode is used in installation to physically align the unit. Command mode is required for access to this command.
2. An “I” or “i” will clear the Reference Command mode if it had been set by the serial input. This is the default mode at power up and is the normal operating mode. Command mode is required for access to this command.
3. An “F” will disconnect the references from the attitude system and is the Free Mode Command. Free mode is used to make the system ignore the references during high maneuvers and brief disturbances. This mode is not intended for use except in brief intervals, since errors will grow geometrically. Command mode is not required to use this function.
4. A “K” will clear the Free Mode Command. Command mode is not required to use this function.
5. An “L” will send a line of labels that contains an abbreviation of each item currently selected for output in the data string. See Appendix A for details on the label abbreviation for each data item. Command mode is required for access to this command.
6. An “!” will reinitialize the unit. Further, the access to initialization is inhibited such that a spacebar command must be sent within about 2 seconds of the “!” command for initialization to be engaged.
7. An “_” command will change the output format to decimal ASCII. This change is made non-volatile in the unit on EEPROM by keying in the quote (“) character. Command mode is required for access to this command.
8. A “^” command will change the output format to binary. This change is made non-volatile in the unit on EEPROM by keying in the quote (“) character. Command mode is required for access to this command.
9. A “:” command will toggle the output to send a frame of data upon receiving any non-command character (On to Off; Off to On). This change is made non-volatile in the unit on EEPROM by keying in the quote (“) character. Command mode is required for access to this command.

Note: To test if this command is active when the unit is not flowing data, send a carriage return (or any other non-command character to the sensor, and observe if there is any output.

10. A “+” command will suppress or restore the transmission of data. This command will toggle the data transmission (On to Off; Off to On). Command mode is required for access to this command.

Note: It is possible for both the “:” and the “+” commands to be active at the same time. The “+” command determines whether the sensor is allowed to transmit data. So if this were the case, the “:” command must also be turned off to allow the free flow of data.

11. An “*” command will suppress or restore the initialization message in the Decimal ASCII mode. This command will toggle the transmitting of the text header during initialization (On to Off; Off to On). This change is made non-volatile in the unit on EEPROM by keying in the quote (“) character. Command mode is required for access to this command.
12. An “&” command brings up a menu which allows any of several parameters to be set. These are system time constants, selection of data channels for serial output, and baud rates. This change is made non-volatile in the unit on EEPROM by keying in the quote (“) character. Command mode is required for access to this command.

The commands “~”, “@”, “#”, “\$”, (“, “), “{“, “}”, “[“, “<”, “>” and “?” are used by the Watson factory to calibrate the unit and should be used only with the assistance of the factory. If an undesired function is called, a “Q”, and sometimes Escape or a Delete will interrupt the command and return to operation with the least disturbance to the system. All other unspecified characters such as carriage return, line feed and space are ignored by the system.

If there are problems with the system “hanging up” during the binary output mode, check for crosstalk between the serial transmit and receive line in your installation. In addition, check to see that the communications program used is not sending an echo. This will not happen in the decimal or hexadecimal modes because command characters recognized by the system are not produced in those modes.

Connections

9 –Pin Male Power Connector	
Pin	Description
1	Power Ground
2	+ 10 to + 30 VDC
3 - 5	No Connection
6	Factory use (Do not Connect)
7 - 9	No Connection

9 –Pin Female RS-232/Analog Output Connector


Pin	Description
1	No Connection
2	TXD*
3	RXD
4	+5V Power **
5	Signal Ground
6	Bank (X) Angle Analog Output
7	Elevation (Y) Angle Analog Output
8	X Angular Rate Analog Output
9	Y Angular Rate Analog Output

* User Receives data from this line

** Power for optional wireless (Bluetooth) adapter

The RS-232 serial and analog output connections are referenced to Signal Ground on pin 5.

Dimensions

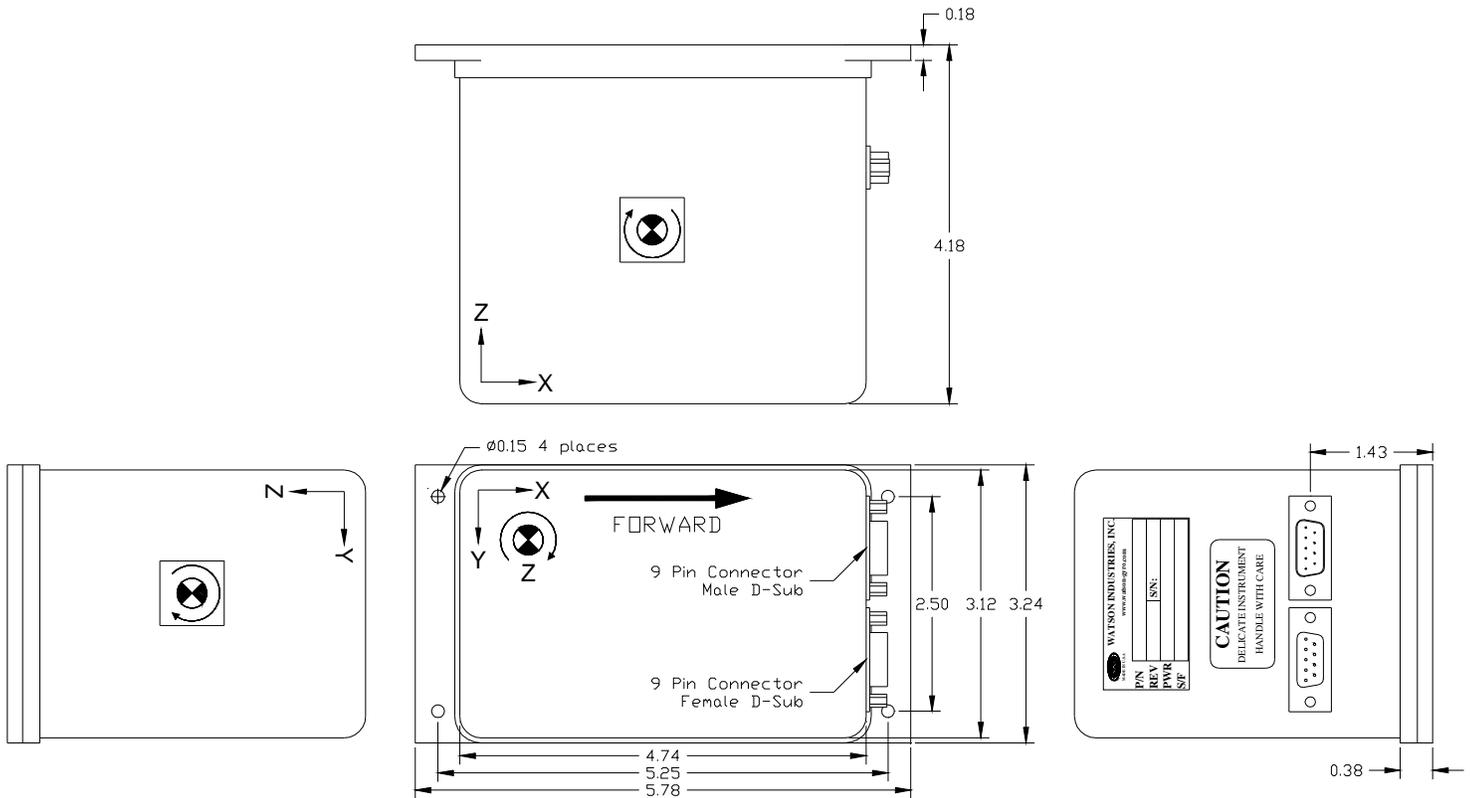

Warning

Rough handling or dropping of this unit is likely to cause damage.
Over-voltage and/or miswiring of this unit will cause damage.
This unit should be protected against prolonged exposure to high humidity and/or salt air environments.

DISCLAIMER

The information contained in this manual is believed to be accurate and reliable; however, it is the user's responsibility to test and to determine whether a Watson Industries' product is suitable for a particular use.

Suggestion of uses should not be taken as inducements to infringe upon any patents.

WARRANTY

Watson Industries, Inc. warrants, to the original purchaser, this product to be free from defective material or workmanship for a period of two full years from the date of purchase. Watson Industries' liability under this warranty is limited to repairing or replacing, at Watson Industries' sole discretion, the defective product when returned to the factory, shipping charges prepaid, within two full years from the date of purchase. The warranty described in this paragraph shall be in lieu of any other warranty, express or implied, including but not limited to any implied warranty of merchantability or fitness for a particular purpose.

Excluded from any warranty given by Watson Industries are products that have been subject to abuse, misuse, damage or accident; that have been connected, installed or adjusted contrary to the instructions furnished by seller; or that have been repaired by persons not authorized by Watson Industries.

Watson Industries reserves the right to discontinue models, to change specifications, price or design of this product at any time without notice and without incurring any obligation whatsoever.

The purchaser agrees to assume all liabilities for any damages and/or bodily injury, which may result from the use, or misuse, of this product by the purchaser, his employees or agents. The purchaser further agrees that seller shall not be liable in any way for consequential damages resulting from the use of this product.

No agent or representative of Watson Industries is authorized to assume, and Watson Industries will not be bound by any other obligation or representation made in connection with the sale and/or purchase of this product.

PRODUCT LIFE

The maximum expected life of this product is 20 years from the date of purchase. Watson Industries, Inc. recommends the replacement of any product that has exceeded the product life expectation.

Customer Service

All repairs, calibrations and upgrades are performed at the factory. Before returning any product, please contact Watson Industries to obtain a Returned Material Authorization number (RMA).

Return Address & Contact Information

Watson Industries, Inc.
3035 Melby Street
Eau Claire, WI 54703
ATTN: Service Department
Telephone: (715) 839-0628 Fax: (715) 839-8248 email: support@watson-gyro.com

Returning the Product

Product shall be packaged making sure there is adequate packing around all sides. Correspondence shall include:

- Customer's Name and Address
- Contact Information
- Equipment Model Number
- Equipment Serial Number
- Description of Fault

It is the customer's responsibility to pay all shipping charges from customer to Watson Industries, including import and transportation charges.

Appendix A

The following outputs are available via the RS-232 serial link. Their full-scale ranges are listed for both decimal and binary format.

<u>Inertial Output</u>	<u>Label</u>	<u>Full Scale Decimal</u>	<u>Full Scale Binary</u>
Time Since Reset	TM	65535	16383
Bank	BK	±179.9°	±180°
Elevation	EL	±89.9°	±180°
X Acceleration	XA	±9.99 g	±10 g
Y Acceleration	YA	±9.99 g	±10 g
Z Acceleration	ZA	±9.99 g	±10 g
X Angular Rate	XR	±99.9 °/s	±200 °/s
Y Angular Rate	YR	±99.9 °/s	±200 °/s
Bank Pendulum (simulated)	XI	±179.9°	±180°
Elevation Pendulum (simulated)	YI	±89.9°	±180°
Temperature	TP	-40° to 88°C	-40° to 88°C (7 bit)
Status Bits	ST	1 byte	1 byte
Flag Bits	FL	1 byte	1 byte

The Status Bits contain the following information:

Bit	Description (If Set)
0	Bank Error Flag
1	Elevation Error Flag
2	Heading Error Flag (used?)
3	Range Excess Flag
4	Velocity Over Range Flag
5	Not used; Set to zero
6	Checksum Error Flag

The Flag Bits contain the following information:

Bit	Description
0 to 2	Show the current system time constant, using the following equation: $TC = 2^{(Flag Value + 1)}$
3	If set, Reference Command selected
4	If set, unit is in initialization
5	If set, Free Mode selected
6	If set, Analog Switches disabled
7	Not used; set to zero

Appendix B

Activating Command Mode (Double Spacebar Mode)

- 1) Connect the unit to a DC power source that is off.
- 2) The viewing computer needs a valid bi-directional RS-232 serial port. Connect the serial port of the Watson sensor to the computer's serial port.
- 3) Open a terminal program (such as HyperTerminal) to interface with the unit. The default baud rate of the unit is 9600 baud. Make sure the computer's serial port is open.
- 4) Power-on the unit. A startup message will be transmitted by the unit and will appear in the terminal window unless it has been suppressed (See RS-232 Input Commands above).
- 5) During initialization, hit the space bar twice within close succession.

Note: The sensor initialization time begins after the startup message is transmitted. Typically, this time period lasts 5 seconds, but could be as long as 127 seconds depending on your sensor.

- 6) Wait until after initialization is finished. At this point, command mode will be activated and the unit will accept keyboard commands.

Note: Most Watson sensors have initialization times that are shorter than 30 seconds. Any extra keystrokes (other than two spacebars) sent during initialization will deactivate command mode.

**It can often take a few attempts to get the hang of step 5. Repeat steps 4-6 until successful.

Accessing the Main Menu

- 1) Activate Command Mode (See above)
- 2) Typing '&' will bring up the main menu:

TYPE IN THE NUMBER OF YOUR SELECTION (OR 'Q' TO QUIT): 1 = ADJUST TIME CONSTANTS 2 = SET OUTPUT CHANNELS 3 = LIST CURRENT OUTPUT CHANNEL SELECTION 4 = SET NEW BAUD RATE
--

Appendix B.1 Adjust Time Constants

- 1) To adjust the system time constants, type '1' at the main menu.

These settings can dramatically change the operation of the sensor and we recommend that any changes be made with the direction of Watson Industries engineering.

Appendix B.2 Set Output Channels

- 1) To change the output channels, type '2' at the main menu.
This will bring up the following message:

```
TO SET FOR OUTPUT FOR ANY OF THE FOLLOWING DATA ITEMS, PRESS Y  
TO AVOID ANY OF THE FOLLOWING DATA ITEMS, PRESS N  
TO QUIT AND DISREGARD ANY OTHER DATA, PRESS Q  
  
*** DO YOU WANT TO PROCEED? (Y/N/Q)
```

- 2) To proceed type 'Y'. Stop this process by typing either 'N' or 'Q'.
If 'Y' is pressed, each channel will come up one at a time
For example:

```
DO YOU WANT OUTPUT TIME SINCE RESET?
```

- 3) Type 'Y' to output the channel, type 'N' to remove the channel.
After the last data channel is listed, this message will appear:

```
Y = GOBACK, N = INSTALL DATA & QUIT, Q = QUIT  
DO YOU WANT TO TRY TO SET DATA AGAIN?
```

- 4) To accept the new channels type 'N'. Typing a 'Y' will start the command menu sequence over.
Typing a 'Q' at any time in the sequence will quit without updating the channels.

Changes made will not change the non-volatile settings. To make these new settings the default value, send a Quotation Mark (").

- 5) Press the space bar after quitting or updating the new channels to restart the data flow.

Appendix B.3 List Output Channels

- 1) To list the current output channel selection, type '3' at the main menu.
- 2) The sensor will show which channels are currently active.

Appendix B.4 Set Baud Rate

- 1) To change the baud rate at which the sensor communicates, type '4' at the main menu.
This will bring up the menu:

```
TYPE IN THE NUMBER OF YOUR SELECTION (OR 'Q' TO QUIT):  
(EFFECTIVE NEXT POWER-UP)  
1 = 38.4 K BAUD  
2 = 19.2 K BAUD  
3 = 9.6 K BAUD  
4 = 4.8 K BAUD
```

2) Change the baud rate to a new setting.

To change to 38,400 Baud, type '1'.

To change to 19,200 Baud, type '2'.

To change to 9,600 Baud, type '3'.

To change to 4,800 Baud, type '4'.

The baud rate change will take effect immediately. To make the new baud rate the default setting, send a quote symbol (") using the new baud rate. Otherwise the old baud rate will return the next time the unit is powered up.

Note: The baud rate of the software that is communicating to the sensor will need to be changed to match the new setting.

3) Press the space bar to resume data transmission.

The factory settings for serial communications are 9.6K baud with 8 bits and one stop bit, no parity.

Appendix C

Binary Data Format

All of the data words have a high sign bit, but the delimiter byte is an ASCII carriage return character that has a low sign bit. One word per output parameter.


Example: Unit is sending out Bank, Elevation, X Angular Rate, & Y Angular Rate
The Unit is seeing these conditions:

Bank	Elevation	X Rate	Y Rate
15.0°	-5.0°	10.2°/s	-3.1°/s

Binary output Format:

Word1	Word2	Word3	Word4	<CR> byte
0x85AA	0xFE9C	0x83A1	0xFF81	0x0D

The Carriage return byte is the only byte in the less than 128 (0x80). This is the Synchronizing Byte.

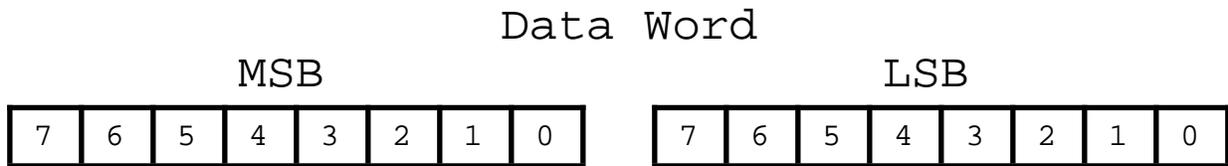

Bit 7 of the MSB is set to 1. Bits 6 to 0 of the MSB are the upper 7 bits of the data. (sign plus 6 bits of data)
Bit 7 of the LSB is set to 1. Bits 6 to 0 of the LSB are the lower 7 bits of the data.

As the data words are received, the LSB is shifted left to shift out the 7th bit (always set to 1). The MSB is then connected to the LSB as a 16-bit word. This word is then shifted left to shift out the 7th bit (always set to 1). What remains is a signed fractional word with a resolution of 13 bits plus a sign bit.

To convert binary data:

Bank	Elevation	X Rate	Y Rate
0x85AA	0xFE9C	0x83A1	0xFF81

Need split each word into two bytes:

Bank	Elevation	X Rate	Y Rate
0x85 0xAA	0xFE 0x9C	0x83 0xA1	0xFF 0x81

Remove the most significant bit from each byte:

Bank	Elevation	X Rate	Y Rate
0x05 0x2A	0x7E 0x1C	0x03 0x21	0x7F 0x01

Shift lower byte left once (to remove 1 bit space between bytes):

Bank	Elevation	X Rate	Y Rate
0x05	0x7E	0x03	0x7F
0x54	0x38	0x42	0x02

Shift lower & upper bytes left once (to remove 1 bit space a top of high byte):

Bank	Elevation	X Rate	Y Rate
0x0A	0xFC	0x06	0xFE
0xA8	0x70	0x84	0x04

Convert from hexadecimal to decimal counts:

Bank	Elevation	X Rate	Y Rate
2728	64624	1668	65028

Correct bank, elevation, and angular rates for the sign
If >32767 then subtract 65536 from the data

Bank	Elevation	X Rate	Y Rate
2728	-912	1668	-508

Convert to units: counts x scale factor

For Bank & Elevation: Scale factor is: $180^\circ / 32768$ counts

For Angular Rate: Scale factor is: $200^\circ/s / 32768$ counts

Bank	Elevation	X Rate	Y Rate
14.991 °	-5.010 °	10.181 °/s	-3.100 °/s

The nominal interface settings are:

9600 Baud
8 Bit Data
1 Start Bit
1 Stop Bit
No Parity